

Instruction and Operating Manual

Smart Valve Positioner

SS2L / SS2R Series

SS2SL / SS2SR Series (SS316)



<Software Version 4.11>

Power-Genex Ltd.

Contents

1. Safety Instructions / Precautions	3
2. Overview of Structure	8
3. Specifications	9
3.1 Specifications of Profibus PA Communication	10
3.2 Specifications of Fieldbus Communication	
4. Part Numbering System (Order Code)	12
5. Principle of Operation	13
6. Descriptions of LCD Display and Buttons	14
7. Installation	15
7.1 Mounting onto Linear Actuator	
7.2 Mounting onto Rotary Actuator	20
8. Air Connections	23
8.1 SS2L(linear type)	
8.2 SS2R(rotary type)	
9. Electrical Connections	24
9.1 Terminal Block	
9.2 Measuring Output Signal	25
9.2.1 With mA Loop Calibrator	
9.2.2 With Multi-meter	
9.3 Wiring Alarm Limits	
9.4 HART Connection	
9.5 Profibus PA / Fieldbus Connection	
9.6 Wiring SPDT Micro Switches	26
9.7 Setting SPDT Micro Switches	
9.8 Earthing	
9.9 Wiring for Intrinsic Safety	27
9.10 Cable Gland / Blind Plug	28
10. Quick Auto-Calibration	29
10.1 Quick Auto-Calibration	
10.2 Checking Ambient Temperature	
11. Description of Parameters Flow	30
11.1 Parameters Flow Diagram	
11.2 Main Parameters	31
11.3 Parameters	32
11.4 Setting Main Parameters	33
11.4.1 LOCK ON / OFF	
11.4.2 Display Mode	
11.4.3 Manual Mode	34
11.4.4 Monitor Mode	
11.4.5 Auto-Calibration Mode	35
11.4.5.A Performing Auto-Calibration	
11.4.5.B Initializing Parameters (RESET)	
11.4.5.C Re-adjustment of Zero & Span (STEN)	
11.4.5.D Re-booting (COLD)	
11.4.6 Self-Test Mode	36
11.5 Parameters Flow Diagram	37

11.5.1 Change of Input Signal	38
11.5.2] Selection of Direct Acting or Reverse Acting	
11.5.3 Selection of Linear, E.Q.%, Quick Open, User Set (17points)	
11.5.4 Span Adjustment	40
11.5.5 Zero Adjustment	
11.5.6 PID-Gain	41
11.5.6.A P-Gain	
11.5.6.B I-Gain	
11.5.6.C D-Gain	
11.5.6.D GROP-Gain	
11.5.7 Control Speed adjustment	43
11.5.7.A SPEED	
11.5.7.B SWST	
11.5.7.C CNLT	
11.5.7.D GCNL	44
11.5.8 Setting of Dead Band	45
11.5.9 D-gain setting for hard mode	
11.5.10 Control Mode	46
11.5.11 SUB-Parameter	47
11.5.11.A Valve Shut-Off Setting	
11.5.11.B Valve Full Open Control	48
11.5.11.C Setting of Output Signal	
11.5.11.D Split Range Setting	
11.5.11.E Chang of Decimal Display	
11.5.11.F Setting of Alarm Limits	49
11.5.11.G Setting of Input Signal	51
11.5.11.H Setting of Output Signal	
11.5.11.I HART Polling Address	52
11.5.11.J Partial Stroke Test	
11.5.11.K [ADDR] – Manual Setting of Profibus PA address	53
12. Maintenance / Service	
12.1 Preliminary Check Points	
12.2 Module Parts	
12.3 Structure of Gauge Block	
12.4 Re-setting of Potentiometer	54
13. Troubleshooting	55
13.1 Error Codes and Recommended Actions	
13.2 Checking Diagram for Stable Control	56
14. Spare Parts	57
14.1 SS2L Spare Parts	
14.2 SS2R Spare Parts	58
14.3 List of Spare Parts	59
15. Dimensions	60
15.1 SS2L(linear type)	
15.2 SS2R(rotary type)	61
15.3 SS2R (2 x SPDT micro limit switch)	62



1-1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (IEC) Note 1), and other safety regulations.

Note 1) IEC 60079-0 : 2007 EN 60079-0 : 2009 EN 13463-1 : 2009
IEC 60079-11 : 2006 EN 60079-11 : 2007 EN 13463-5 : 2010



Caution

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



Warning

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



Danger

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment. The product specified here may become unsafe if handled incorrectly.

The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.

2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact POWER-GENEX beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.

2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.

3. An application which could have negative effects on people, property, or animals requiring special safety analysis.

4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.



1-2 Safety Instructions



Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult POWER-GENEX beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.

Note 2)

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

3. Prior to using POWER-GENEX products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

Note 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of POWER-GENEX products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.

2. The exports of POWER-GENEX products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a POWER-GENEX product to another country, assure that all local rules governing that export are known and followed.



1-3 Precautions

Be sure to read before handling.

Operation



Warning

1. Do not operate the positioner outside the specified range as this may cause problems. (Refer to the specifications.)
2. Design the system to include a safety circuit to avoid the risk of danger should the positioner suffer failure.
3. Be sure that exterior lead-in wiring to the terminal box is based on the guidelines for explosion-protection of manufactory electric equipment when being used as a flame proof, explosion proof construction.
4. Do not remove terminal cover in a hazardous location while the power is on.
5. Covers for the terminal and body should be in place while operating.
6. When using as an intrinsically safe explosion-proof product, do not wire in a hazardous location while the power is on.



Caution

1. Do not touch the actuator or valve's oscillating section when supply pressure has been added, as this is dangerous.
2. Make sure fingers do not get caught when mounting and aligning the cam.
Cut off the pressure supply and always release the compressed air inside the positioner and actuator before performing this work.
3. Always use with the body cover unit mounted.
Moreover, the positioner may not meet degrees of protection IP66 depending on the body cover mounting conditions. In order to meet degrees of protection IP66, tighten threads using the proper tightening torques (2.8 to 3.0 N·m).
4. Always flush the pipe's inside before piping to ensure foreign objects such as machining chips do not enter the positioner.
5. The actuator opening may become unstable when using the booster relay.
6. Always use a ground connection to prevent noise from the input current and to prevent damage because of static electricity.
7. Use the pressure reading on the supplied pressure gauge as an indication.
8. The supplied pressure gauge's needle will malfunction if the pressure supply to the internal mechanism or positioner freezes. Ensure that the pressure gauge's internal parts do not freeze if using the pressure gauge in an operating environment with an ambient temperature of less than 0°C.

For users



Caution

1. Assemble, operate and maintain the positioners after reading the operation manual thoroughly and understanding the content.



1-4 Precautions

Be sure to read before handling.

Handling



Caution

1. Avoid excessive vibration or impact to the positioner body and any excessive force to the armature, as these actions may cause damage to the product. Handle carefully while transporting and operating.
2. If being used in a place where vibration occurs, using a binding band is recommended to prevent broken wires because of the vibration.
3. When exposed to possible moisture invasion, please take the necessary measures. For example, if the positioner is left onsite for long periods, a plug should be put in the piping port and a body cover unit fitted to avoid water penetration.
Take measures to avoid dew condensation inside the positioner if exposed to high temperature and humidity. Take enough measures against condensation especially when packing for export.
4. Keep magnetic field off the positioner, as this affects its characteristics.

Air Supply



Caution

1. Use only dehumidified and dust extracted clean compressed air as the air supply.
2. Use only dehumidified and dust extracted clean compressed clean air as the positioner contains extrafine orifices such as restrictor and nozzle.
Do not use a lubricator.
3. Do not use compressed air containing chemicals, organic solvents, salinity or corrosive gases, as this may cause malfunction.
4. When operating below the freezing point, protect the positioner from freezing.

Operating Environment



Caution

1. Do not operate in locations with an atmosphere of corrosive gases, chemicals, sea water, or where these substances will adhere to the regulator.
2. Do not operate out of the indicated operation temperature range as this may cause damage to electronic parts and seal materials to deteriorate.
3. Do not operate in locations where excessive vibration or impact occurs.
4. If the body cover is being installed in a place where the body cover is exposed to direct sunlight, the use of a standard body cover without the LCD window is recommended.



1-5 Precautions

Be sure to read before handling.

Maintenance



Warning

1. After installation, repair or disassembly, connect compressed air and conduct tests to confirm appropriate function and leakage.

Do not use the positioner when noise from the bleeder sounds louder compared with the initial state, or when it does not operate normally. If these occur, check immediately if assembled and mounted correctly.

Never modify electrical construction to maintain explosion-proof construction.



Warning-Potential electrostatic charging hazard

1. The non-metallic parts incorporated in the enclosure of this equipment may generate an ignition capable level of electrostatic charge. Therefore particularly when it used for applications that specifically require Group IIC, EPL Ga equipment, the equipment shall not be installed in a location where the external conditions are conducive to the build-up of electrostatic charge on such surfaces. Additionally, the equipment shall only be cleaned with a damp cloth.
2. The enclosure contains aluminium and is considered to present a potential risk of ignition by impact or friction. Care must be taken during installation and use to prevent impact or friction. Particularly, it must not be used for applications that specifically require EPL Ga equipment.




Caution

1. The insulation between an intrinsically safe circuit and a frame of the equipment is not capable of withstanding a 500V dielectric strength test as defined in Cl.6.3.12 of EN 60079-11:2007. This shall be taken into account during installation.
2. the earthing of enclosure is necessary to maintain Intrinsic Safety because the insulation between an intrinsically safe circuit and a frame of the equipment is not capable of withstanding a 500V dielectric strength test. There are two earthing points on the equipment. One is provided as an internal earthing point inside rear cover of the equipment for attaching of a cable screen. The other is provided as an external earthing point on the left side of the enclosure. Their cross-sectional areas should be capable of carrying the maximum possible current of the equipment. (Generally, an insulated wire having a cross-sectional area of at least 4mm² is recommended) The cable should be fitted with a split ring lock washer to minimize the risk of self-loosening and is of suitable construction for securing of conductors of cross sections up to 4mm².


2. Overview of Structure

This product consists of the following parts.

- Electronic card comprised of microprocessor, HART modem and LCD
- Potentiometer for position feedback
- Gauge block

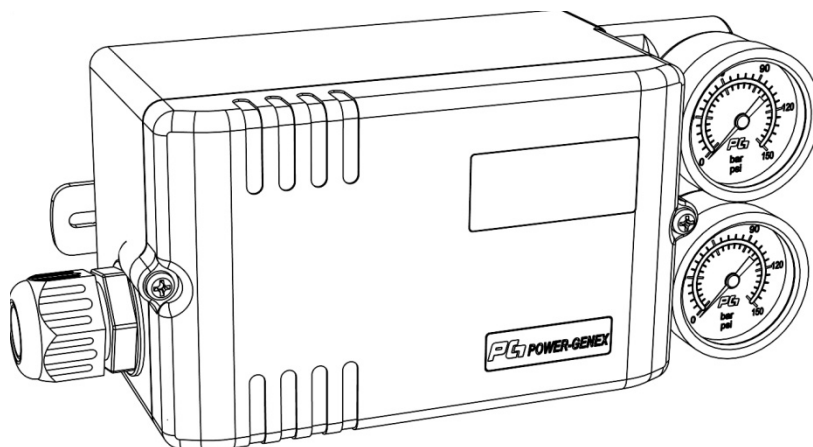

The followings are descriptions of internal parts without cover.

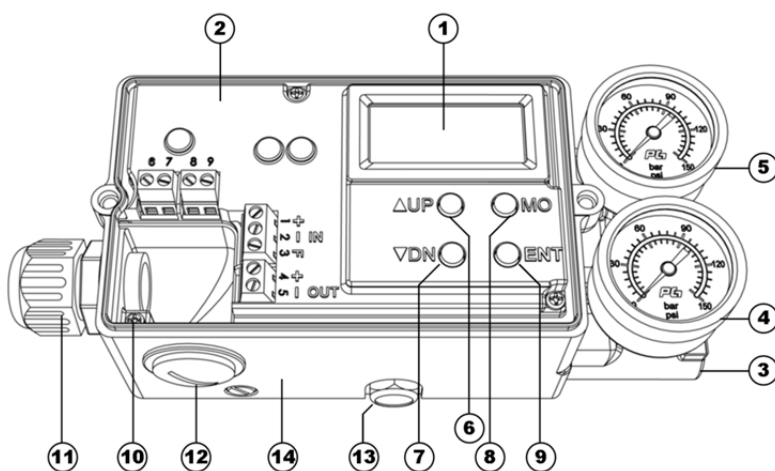

No.	Description
1	LCD
2	Board cover
3	Gauge block
4	Supply air gauge
5	Out 1 gauge
6	▲UP, Up button
7	▼DN, Down button
8	MO, Mode button
9	ENT, Enter button
10	Ground
11	Cable gland (or blind plug)
12	Blind plug (or cable gland)
13	Air venting hole
14	Body

3. Specifications

Input signal	4 - 20 mA @ 24 VDC	
Min. / Max. current	3.6 mA / 50mA	
Communication	HART / Profibus PA / Foundation Fieldbus	
Operating angle/ stroke	Linear type: 5 - 130mm * Rotary type: 25 - 120°	
Supply air pressure	1.4 - 7.0 bar (20 - 100 psi)	
Output pressure range	0 - 100% of supply air	
Air flow capacity	80 ℓ/min = 4.8 Nm³/h = 2.8 scfm (Sup = 1.4 bar) 233 ℓ/min = 14 Nm³/h = 8.2 scfm (Sup = 6 bar)	
Air consumption	2.8 ℓ/min = 0.17 Nm³/h = 0.1 scfm (Sup = 1.4 ~ 6 bar)	
Characteristic	Linearity < ±0.3% F.S Sensitivity < 0.2% F.S Hysteresis < 0.2% F.S Repeatability < 0.2% F.S	
Operating characteristic	Linear, EQ%, Quick open, User set (17 points)	
LCD display	4-digit	
Response speed	1 - 1000 (Min. 1, Max. 1000)	
Scan time	2 ms	
Shut-off value	0 - 10%	
Valve action	Direct acting (DA) / reverse acting (RA)	
Operating temperature	-30°C ~ +80°C (-22 ~ +176°F) **	
Pneumatic connections	Rc 1/4 or NPT 1/4	NPT 1/4
Electrical connections	G 1/2, NPT 1/2 or M20 x 1.5	NPT 1/2
Explosion proof / protection class	ATEX / IECEx-certified intrinsically safe Exia IIC T6/T5, IP66	
	Zone 1	Zone 0
Body material / painting	Aluminum die-cast	Stainless steel 316
Weight	1.6 kg	3.9 kg

With Communication

Communication	-	HART	PROFIBUS	Foundation Fieldbus
Input signal / Bus voltage	4 - 20 mA @ 24 VDC		9 - 32 VDC	
Min. / Max. Current	3.6 mA / 50mA		-	

Current Consumption	-		15 mA	16 mA
Voltage drop (impedance)	8.9 VDC (445Ω @ 20mA)	9.4 VDC (470Ω @ 20mA)	-	

* For more than 200mm stroke on request

** Operating temperature of -40°C on request

3.1 Specifications for Profibus PA Communication

Profiles	PROFIBUS Profile for Process Control Devices Version 3.02
Block types	1 AI Function Block 1 AO Function Block 2 DI Function Block 1 Transducer Block 1 Physical Block
Physical layer	In compliance with IEC 61158-2
Transmission rate	31.25 kbit/s
Supply voltage	Bus-powered : 9 ~ 32 VDC
Max. permissible voltage	35 VDC
Power consumption	15 mA
Physical device tag	SSPA
PNO ID number	0x0E19
Bus address	Between 0 and 126, default bus address 126
Certification No.	Z01802
Revision	1.0;SW/FW:01.00;HW:01.00
GSD	PWGX0E19.GSD, File Version: 5.0 pa139710.gsd

3.2 Specifications for Fieldbus Communication


Specification	Foundation TM Fieldbus Version 2.0
Physical layer	Model 113,121 (IEC 61158-2)

Transmission rate	31.25 kbit/s
Supply voltage	Bus-powered : 9 ~ 32 VDC
Block types	2 AI Function Block 1 AO Function Block 2 DI Function Block 1 Transducer Block 1 Physical Block
Max. execution time	AO block: 31.25 milliseconds
Supply voltage	Power feed from the fieldbus: 9 ~ 32 VDC
Max. permissible voltage	36 VDC
Power consumption	16 mA
Certificate	FF Conformance Test ITK 6.1.1
Device name	PG-SS Positioner
Dev. ID	0003460001_PG-SS_XXXXXXX
Unit address	Between 10 and 27, default address 247
Class	LM profile 32L, 31PS
Factory default	The PG-SS Positioner is not delivered in an aligned state. To adjust the operating range and control parameters, an automatic configuration must be run on the unit. Otherwise, the transducer block remains in out-of-service mode.
Diagnostic functions	Self-diagnostics for the PG-SS Positioner hardware and software, valve diagnostics with enhanced alarm handling

4. Part Numbering System (order code)


		SS2	x	x	—	x	x	x	x	x	x	x	x	x
Body material	Aluminum die-cast													
	Stainless steel 316		S											
Actuator type	Linear			L										
	Rotary			R										
Protection class	Intrinsically safe (Exia IIC T6/T5)				I									
	Weatherproof to IP66				W									
Feedback lever	Linear type	5 ~ 30mm stroke				A								
		5 ~ 70mm stroke				B								
		5 ~ 130mm stroke				C								
		80 ~ 200mm stroke				D								
	Rotary type	Fork lever				F								
		NAMUR shaft (direct mounting)				N								
Pressure Gauge	Not included						0							
	6 bar (90psi)						1							
	10 bar (150psi)						2							
Position feedback	Not included							N						
	Position transmitter (4~20mA output)							O						
	2 x alarm limit							L						
	2 x micro switch (SPDT)							S						
	O + L							M						
	O + S							Q						
Communication	Not included								N					
	HART communication								H					
	Profibus PA communication								P					
	Foundation Fieldbus communication								F					
Pneumatic – electrical connections	Rc 1/4 - G 1/2 (standard)									3				
	NPT 1/4 - NPT 1/2										4			
	Rc1/4 - M20x1.5											5		
Mounting bracket	Not included												N	
	IEC 60534-6-1 (for SS2L)													L
	IEC 60534-6-2(VDI/VDE 3845)(for SS2R)													R
Feedback pin guide	Not included													0
	Included													1

4.1 Descriptions on Nameplate

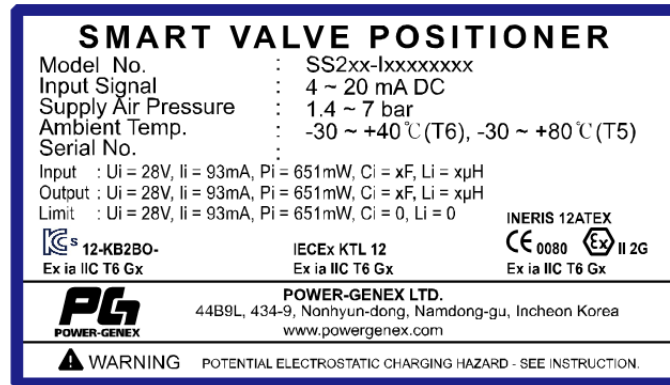


- .. Model No.:
The product model and options selected are described.
- .. Input signal:
4 – 20mA input signal with 2-wire is described.
- .. Ambient Temp.:
The ambient temperate range for operation is described.
- .. Serial No. / Date: Serial number and production date are described.
- .. Input - U_i , I_i , R_i , P_i , L_i , C_i : Intrinsic safety electrical parameters for input are described.
output - U_o , I_o , R_o , P_o , L_o , C_o : Intrinsic safety electrical parameters for output are described.
Limit - U_l , I_l , R_l , P_l , L_l , C_l : Intrinsic safety electrical parameters for alarm or switch are described.
- .. Protection class: Explosion proof classifications approved are described.
- .. Certificate No: Certification number is described.

5. Principle of Operation

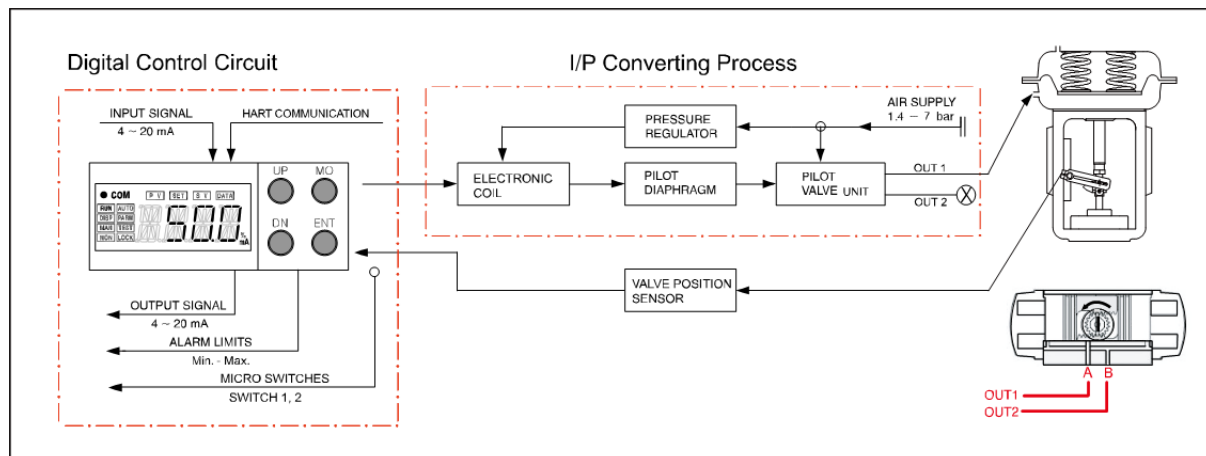

If 4-20 mA input signal is supplied, the micro-processor compares input signal with position feedback and sends control signal to the I/P converting module. Pneumatic signal from the I/P converting module operates the valve and the valve stays at the desired position.

6. Descriptions of LCD display and Buttons

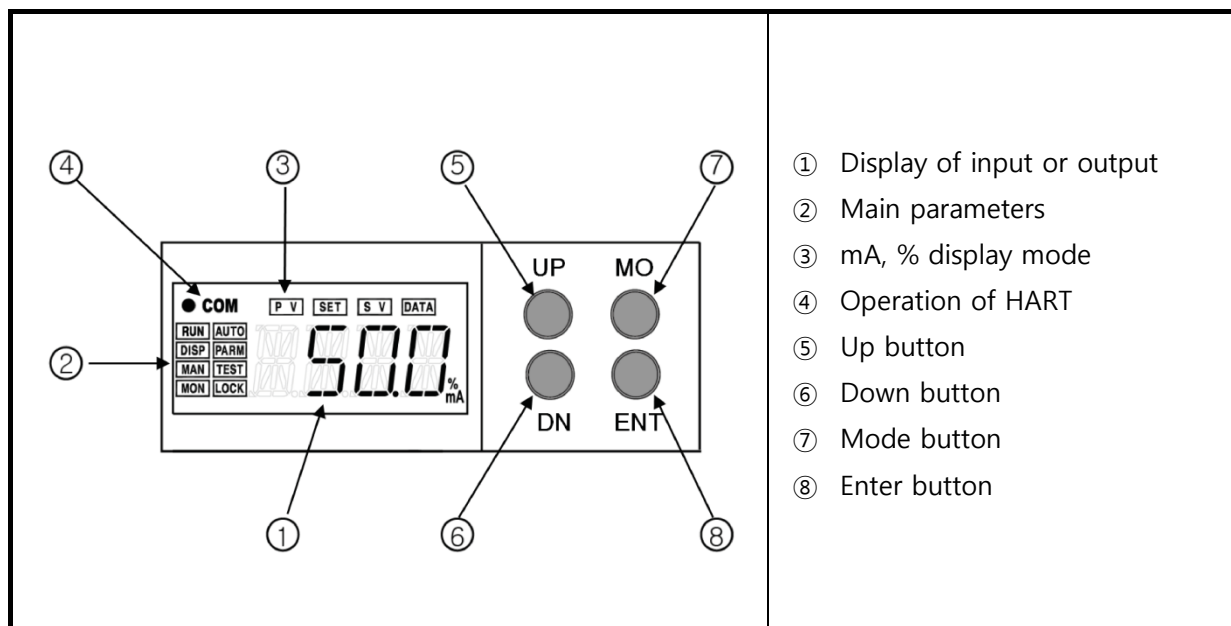

Press "Mode" button for 5 seconds	• Quick auto-calibration
Press "Up(▲)" button for 5 seconds	• GROP-gain adjustment
Press "Down(▼)" button for 5 seconds	• Span adjustment
Press "Enter" button	• Ambient temperature (°C)

① Display of input or output	<ul style="list-style-type: none"> • mA, %
② Main parameters	<p>MODE ↔ RUN ↔ DISP ↔ MAN ↔ MON ↔ AUTO</p> <p> ↑ ↘ ↗ ↑</p> <p> LOCK ↔ TEST ↔ PARM</p>
③ Display mode	<ul style="list-style-type: none"> • Selection of mA, % or in reverse way with values shown (Ex. Reverse : 20% shown → 80% shown)
④ HART communication	<ul style="list-style-type: none"> • HART communication
⑤ Up (▲)	<ul style="list-style-type: none"> • UP button
⑥ Down (▼)	<ul style="list-style-type: none"> • DOWN button
⑦ MO (Mode)	<ul style="list-style-type: none"> • Selection of running mode • Selection of parameter group or parameter
⑧ ENT(Enter)	<ul style="list-style-type: none"> • Save of setting values


7. Installation



Be sure to install the air filter regulator before the positioner and check a supply air pressure required to move the valve.


7.1 Mounting onto Linear Actuator

7.1.1 Installation of Follower Guide

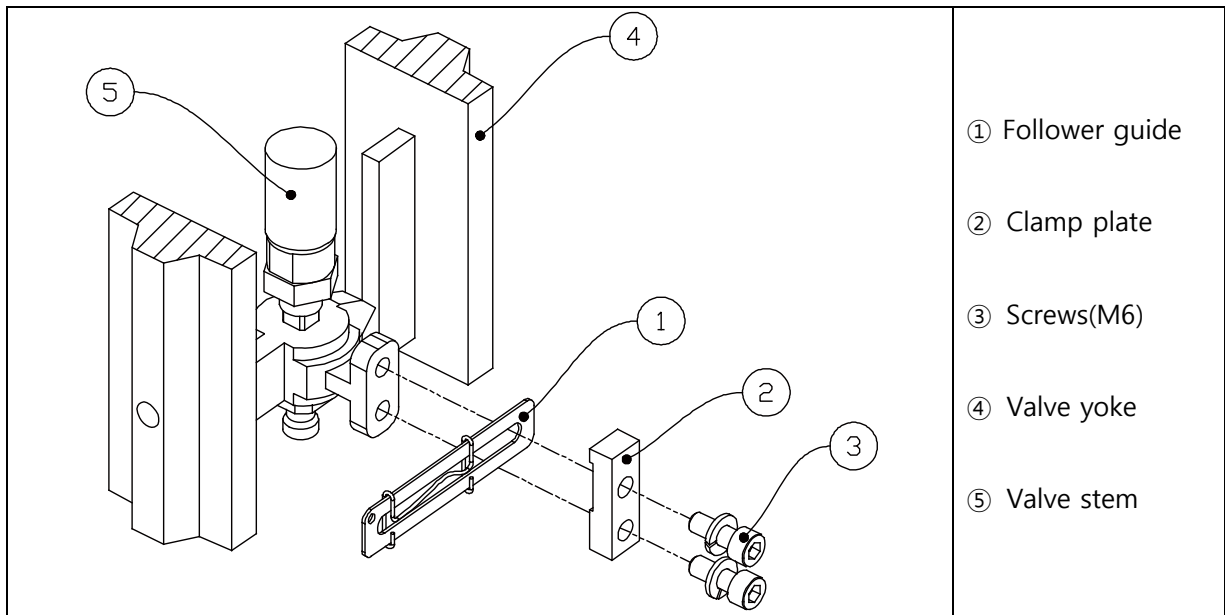


7.1.2 Installation of Feedback Lever and Mounting Bracket


Mounting bracket for SS2L positioner is designed to support IEC 60534-6-1.

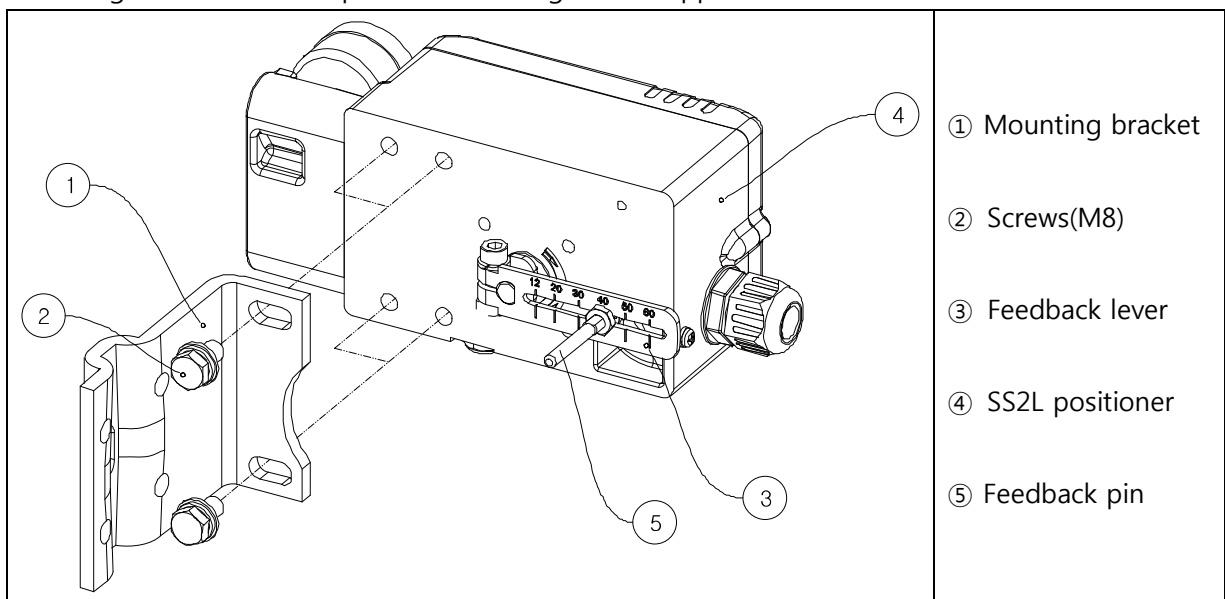


7.1.3 Mounting onto Cast Yoke or Pillar Yoke

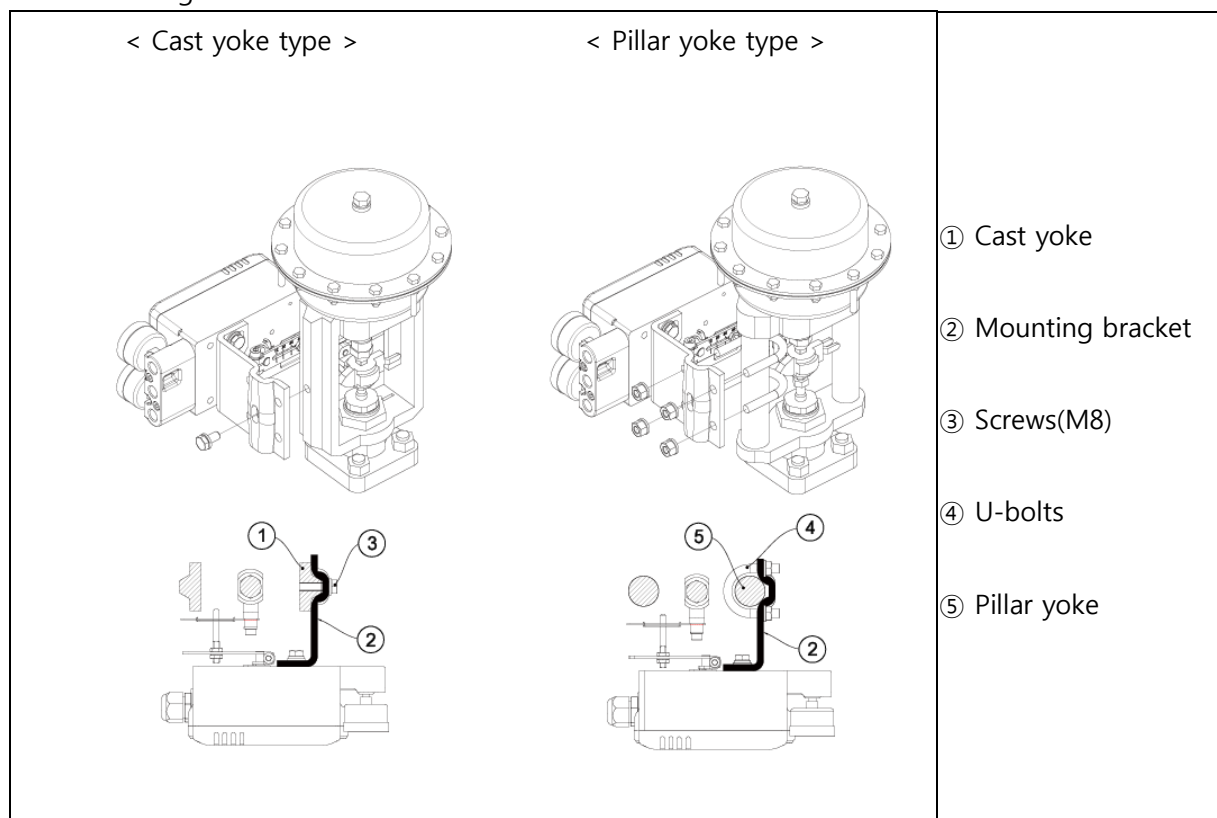


7.1.4 Mounting onto Other Kind of Cast Yoke

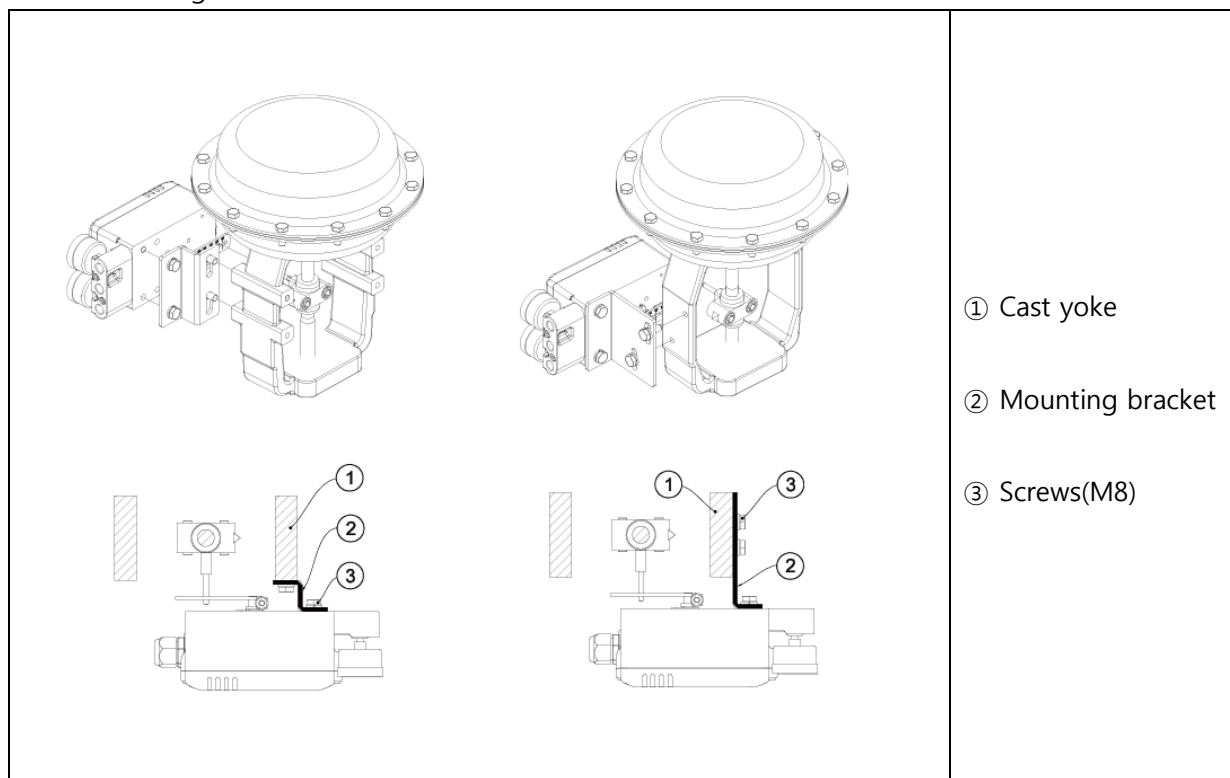


7.1.5. Mounting on Diaphragm Actuator

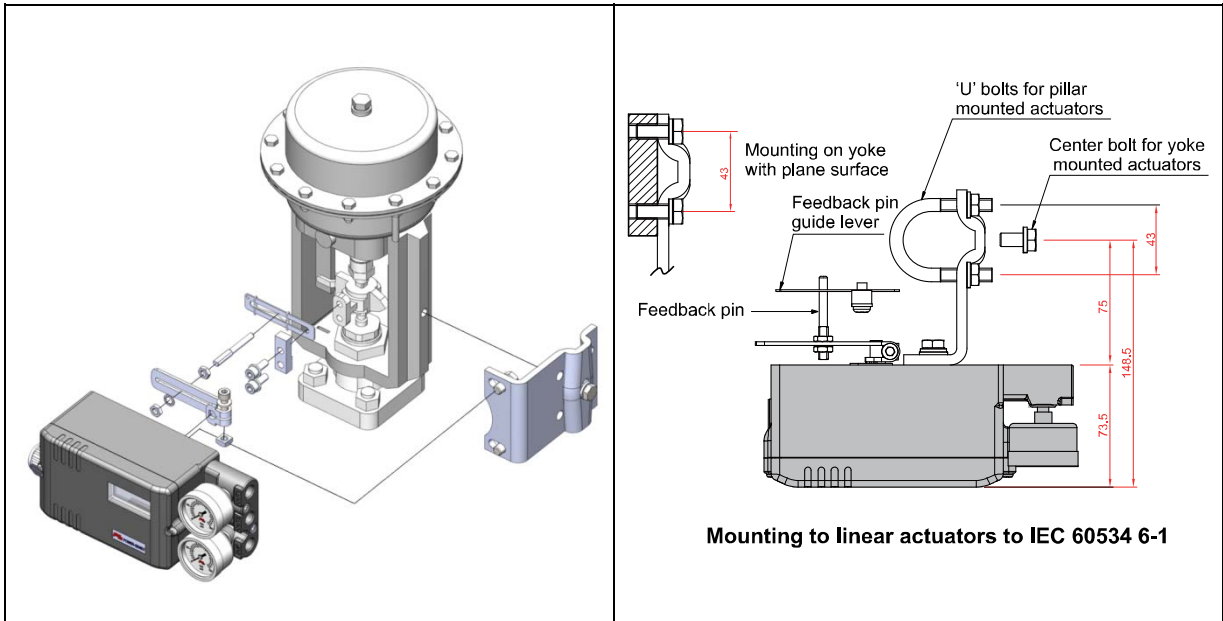


"A" Type

 

"B" Type

 

"C" Type

 

Feedback Lever

Feedback Levers


"A" type: 8 ~ 30mm stroke

"B" type: 8 ~ 70mm stroke


"C" type: 8 ~ 130mm stroke

"D" type: 80 ~ 200mm stroke

7.1.6 Installation of Feedback Pin Follower Guide

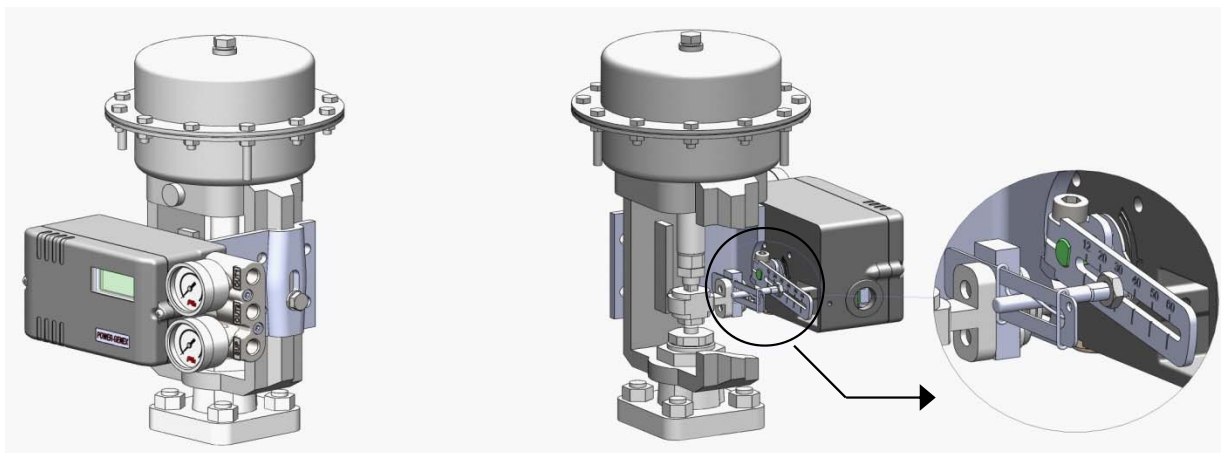

7.1.7 Standard Installation

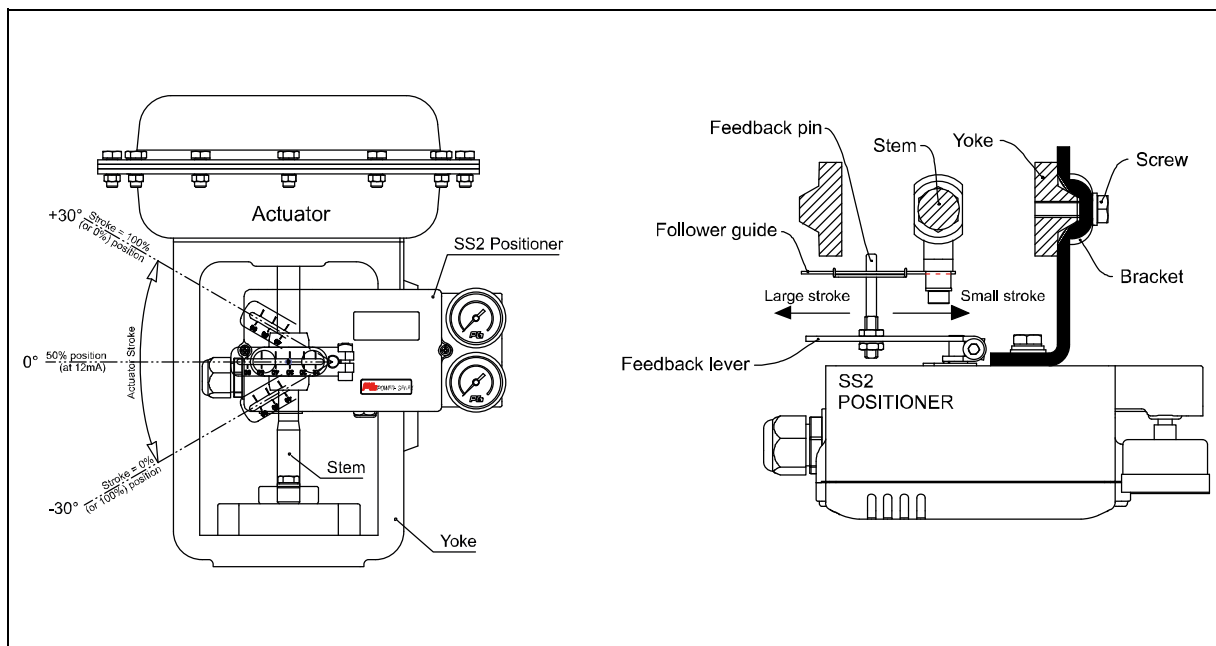





- ① Supply air directly to the actuator, adjust the air filter regulator and set air when the valve reaches to 50% stroke.
- ② Install the feedback pin at around 30% higher point of the stroke indicated on the feedback lever than the required stroke of the control valve and fix with a screw tightly. For example,

Control valve stroke	Stroke indicated on feedback lever
15mm	20mm
20mm	25mm
30mm	40mm

- ③ Install the feedback lever horizontally at 50% stroke position.
- ④ If the feedback lever is not installed horizontally, move the mounting bracket up and down little by little so that it can be positioned horizontally.
- ⑤ Fix the mounting bracket with screws (M8).
- ⑥ Connect air lines between the SS2L positioner and the actuator and supply air to the positioner and perform auto-calibration by pushing Mode button for 5 seconds.
- ⑦ The operating angle from 0% to 100% stroke should be within the range of $\pm 30^\circ$. In case of the over-range of 30° , move the valve stem pin to left or right and make the SS2L positioner stay within the operating angle of $\pm 30^\circ$.




Make sure that the SS2L positioner works within the operating range of $\pm 30^\circ$. See the below pictures. Otherwise, the error message of 'MONT' appears on LCD and the auto-calibration process fails. Take action as advised in the above ⑦ and get the SS2L positioner feedback lever positioned horizontally at 12mA (50%).

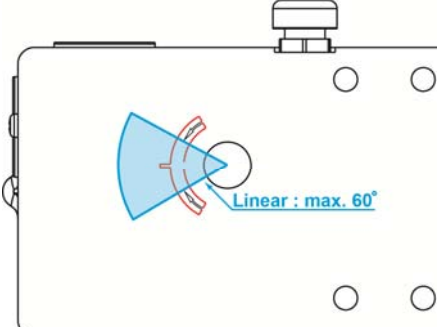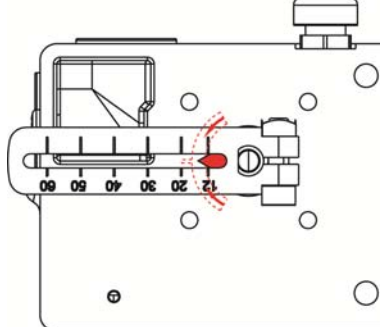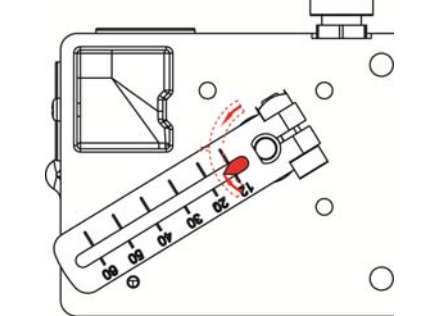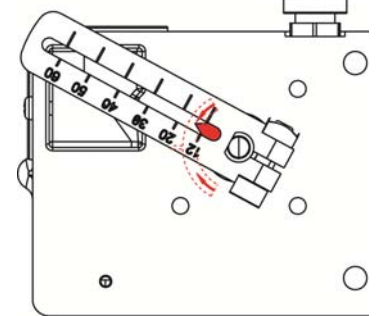	
<p><Maximum operating angle : 60°></p>	<p><Indicator position at 50%></p>
	
<p><Indicator position at 0% (100%)></p>	<p><Indicator position at 100% (0%)></p>

7.2 Mounting onto Rotary Actuator

7.2.1 The SS2R positioner supports NAMUR mounting standard (VDI/VDE 3835, IEC 60534-6-2).

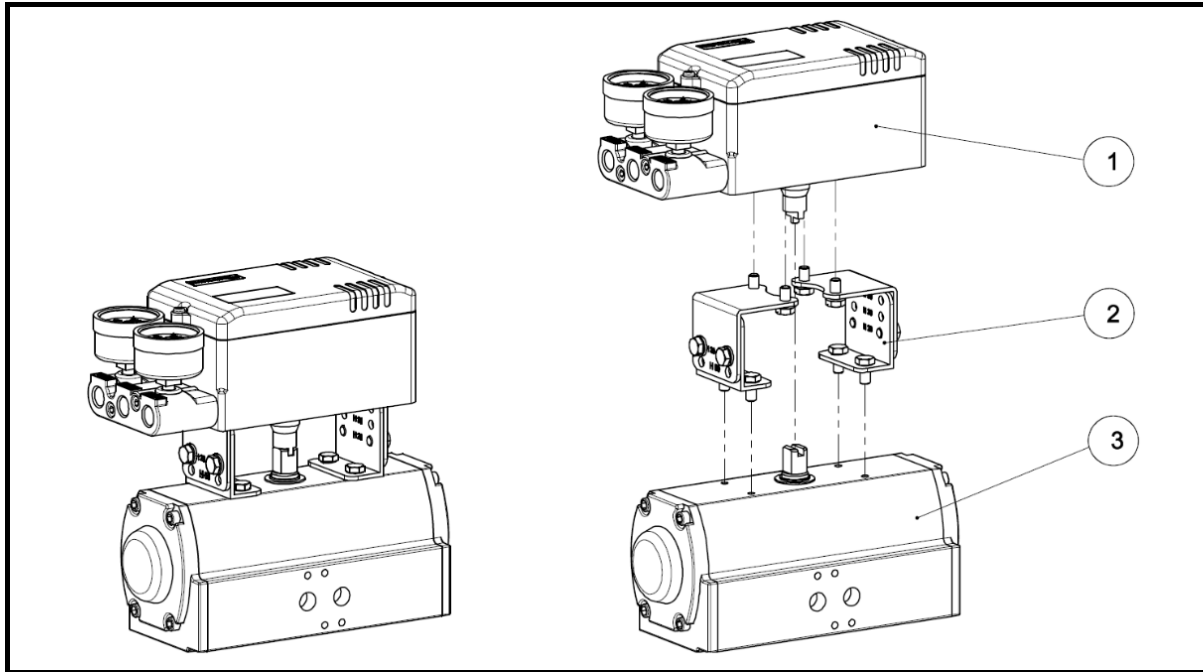

① SS2R positioner ② Multi-size bracket ③ Rotary pneumatic actuator

Ⓐ Assemble the multi-size bracket to the SS2R positioner with 4 pcs M6 screw. The multi-size bracket is assembled for 80x30x20mm as standard at the factory. If you have other size bracket, see '7.2.4 Re-assembling Multi-size Bracket according to Rotary Actuator'.


Ⓑ Mount the SS2R positioner onto the rotary pneumatic actuator with 4 pcs M5 screw.


Ⓒ Connect air lines between the SS2R positioner and the rotary pneumatic actuator.

Ⓓ Perform auto-calibration by pushing MODE button for 5 seconds.




Make sure that the SS2R positioner works within the operating range indicated on the bottom. See the below pictures. Otherwise, the error message of 'MONT' appears on LCD and the auto-calibration process fails.

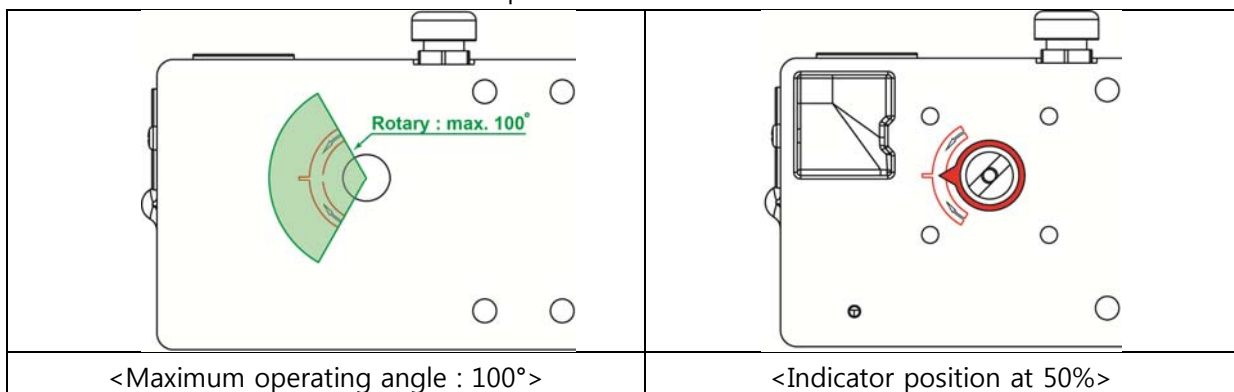

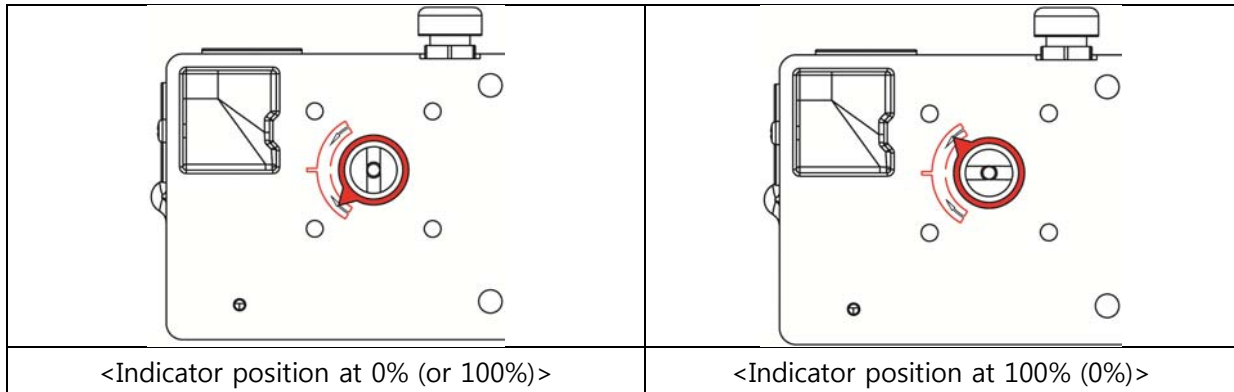


7.2.2 Mounting with Fork Lever Type

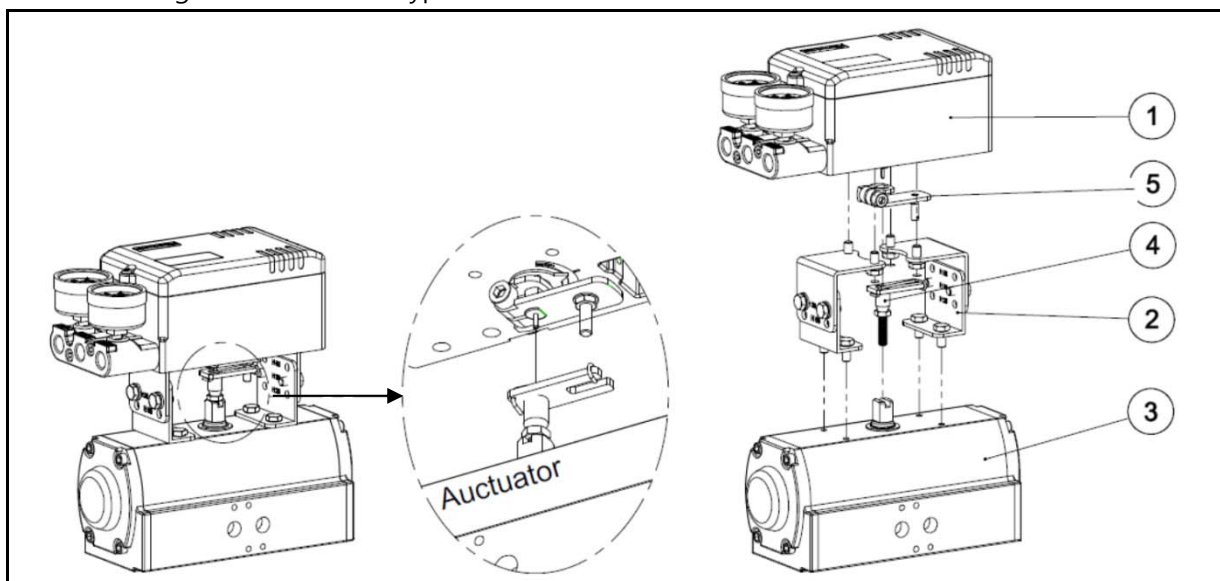

- ① SS2R positioner
- ② Multi-size bracket
- ③ Rotary pneumatic actuator
- ④ Fork lever
- ⑤ Positioner feedback lever


7.2.3 Position of Fork Lever

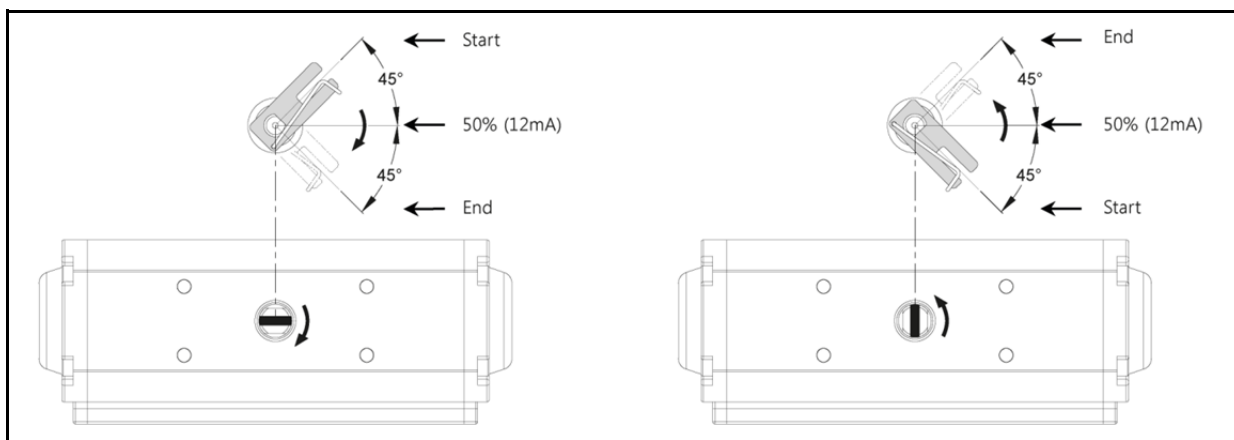

Clockwise movement

Counter-clockwise Movement

7.2.4 Re-assembling Multi-size Bracket according to Rotary Actuator

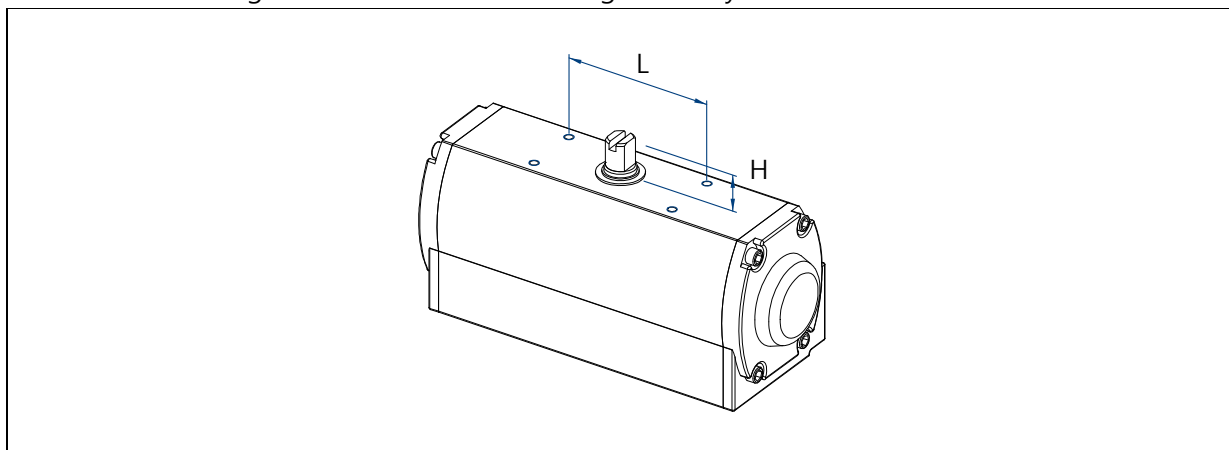

L (mm)	H (mm)	
80	20	
80	30	
80	50	

L (mm)	H (mm)	
130	20	
130	30	
130	50	









Check L and H on the actuator and re-assemble the multi-size bracket to fit your actuator mounting configuration.

8. Air Connections






- ① Be sure to install the air filter regulator before the positioner.
- ② Supply air should not contain water, oil or moisture.
- ③ It is recommended to set a supply air pressure 10% higher than the actual operating pressure of the actuator.

8.1 SS2L (linear type)

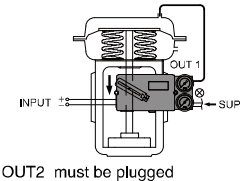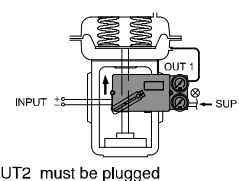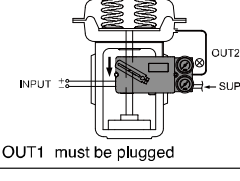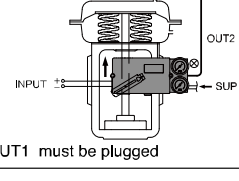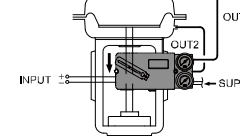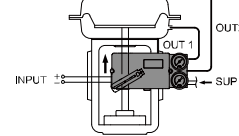Direct Acting (DA)		Reverse Acting (RA)	
DA 1 As the input signal increases, Valve stem moves downwards Actuator : DA		RA 1 As the input signal increases, Valve stem moves upwards Actuator : RA	
DA 2 As the input signal increases, Valve stem moves downwards Actuator : DA		RA 2 As the input signal increases, Valve stem moves upwards Actuator : RA	
DA 3 As the input signal increases, Valve stem moves downwards		RA 3 As the input signal increases, Valve stem moves upwards	

8.2 SS2R (rotary type)

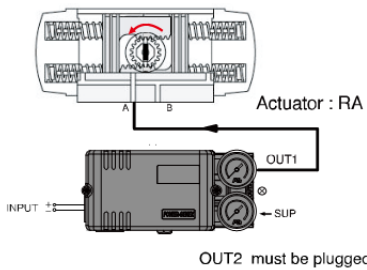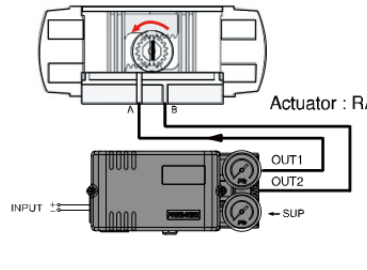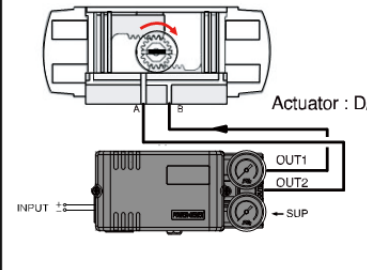Spring Return	Double Acting	Double Acting
		
As the input signal increases, Actuator shaft rotates counter-clockwise	As the input signal increases, Actuator shaft rotates counter-clockwise	As the input signal increases, Actuator shaft rotates clockwise


	Spring Return	Double Acting
Reverse Acting	Out 1 : piped, Out 2 : plugged	Out 1 : piped to Actuator port A, Out 2 : piped to Actuator port B
Direct Acting	Out 1 : plugged, Out 2 : piped	Out 1 : piped to Actuator port B, Out 2 : piped to Actuator port A

9. Electrical Connections



- ① Be sure to supply the rated voltage and current stated on this manual. Otherwise, it may cause a serious damage or malfunctions.
- ② Check polarity of + and – exactly and connect wires.
- ③ When it is necessary to open the positioner cover at a humid place, more attention is required. It may cause a serious damage or malfunctions.

9.1 Terminal Block

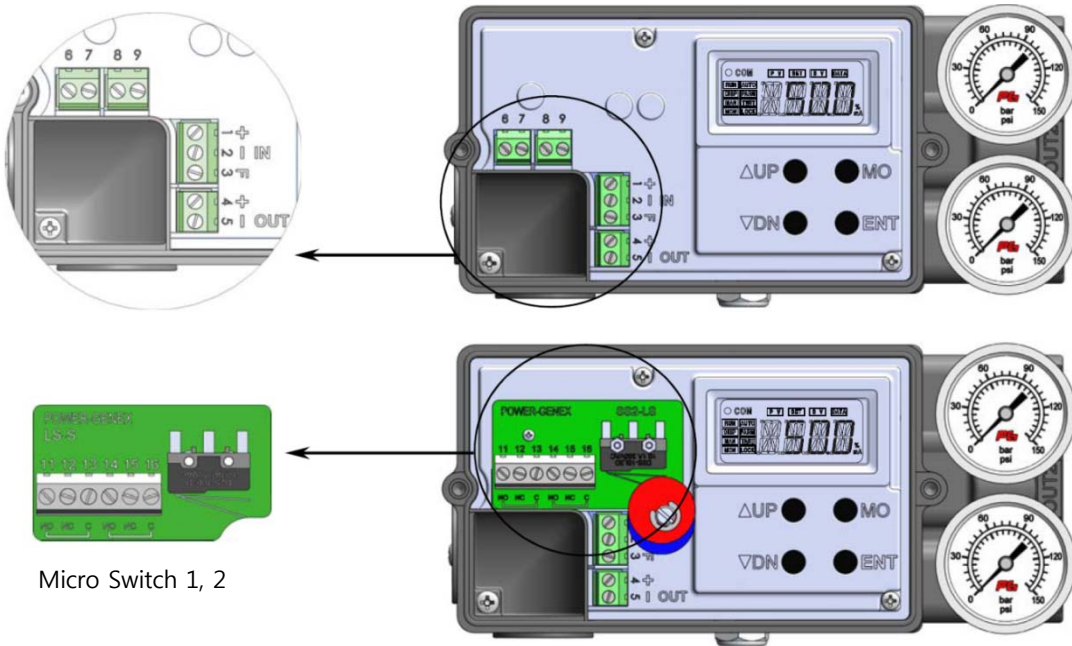


1	2	3	4	5	6	7	8	9	11	12	13	14	15	16
+	-	F	+	-	+	-	+	-	NO	NC	COM	NO	NC	COM
Input (Communication)		Ground	Output		Alarm limit 1		Alarm limit 2		Switch 1			Switch 2		

1	+	4-20mA input signal	HART / Profibus PA / Fieldbus
2	-	4-20mA input signal	
3		Ground	
4	+	4-20mA output signal	
5	-	4-20mA output signal	
6	+	Alarm limit 1	
7	-	Alarm limit 1	
8	+	Alarm limit 2	



9	-	Alarm limit 2
11		Switch 1 NO
12		Switch 1 NC
13		Switch 1 COM
14		Switch 2 NO
15		Switch 2 NC
16		Switch 2 COM

9.2 Measuring Output Signal

 9.2.1 With mA loop calibrator



 9.2.2 With multi-meter

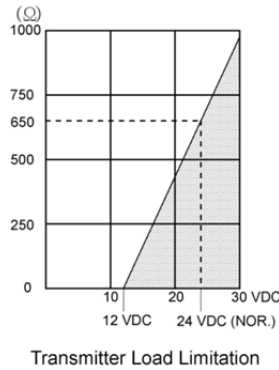



Position Transmitter Specifications	
Output signal	4 – 20mA, 2-wire
Power supply	12 – 30 VDC
Output current limit	30mA DC
Linearity	±0.75% F.S
Operating temperature	-20 ~ +80°C



Zero and span of position feedback (4-20mA output signal) are set automatically during auto-calibration process.

9.3 Wiring Alarm Limits

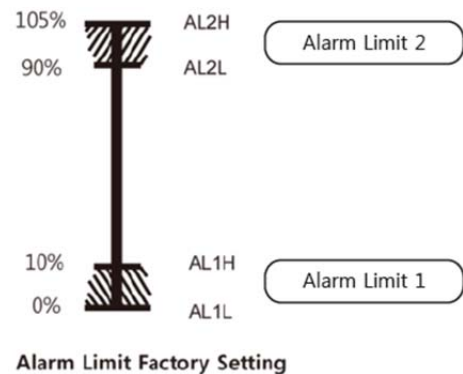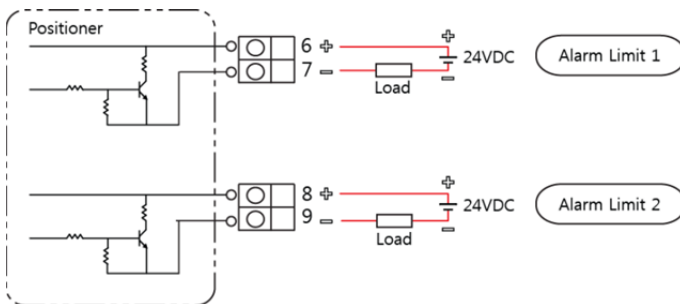

24VDC should be supplied for alarm limits.

9.4 HART Connection




Note that wires for HART communication should be connected to terminals No. 1 and No. 2 together with wires for input signals. For reference, there is no distinction in + and – between HART wires.

9.5 Profibus PA / Fieldbus Connection




Make sure of + and – when connecting wires.

9.6 Wiring SPDT Micro Switches

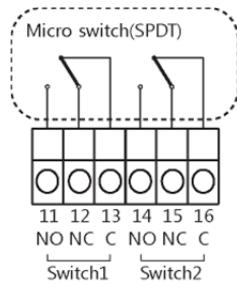

Micro Switch Specifications	
Type	SPDT
Rating code	10.1A @ 250 VAC
Operating temperature	-25 ~ +85°C

9.7 Setting Micro Switches


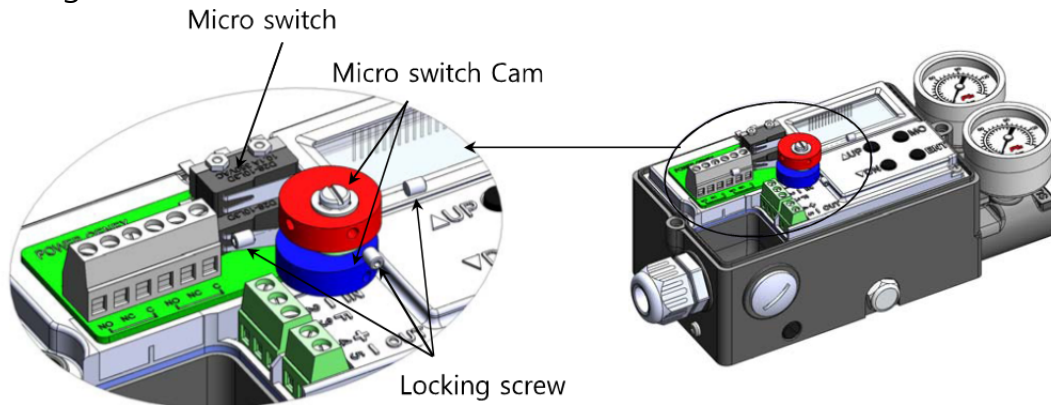


After auto-calibration process, turn the micro switch cams clockwise slowly and check the contact points.

After checking the contact points of the micro switches at a desired position, fix with screws.

For reference, upper switch 1: No. 11, 12, 13 / lower switch 2: No. 14, 15, 16





9.8 Earthing

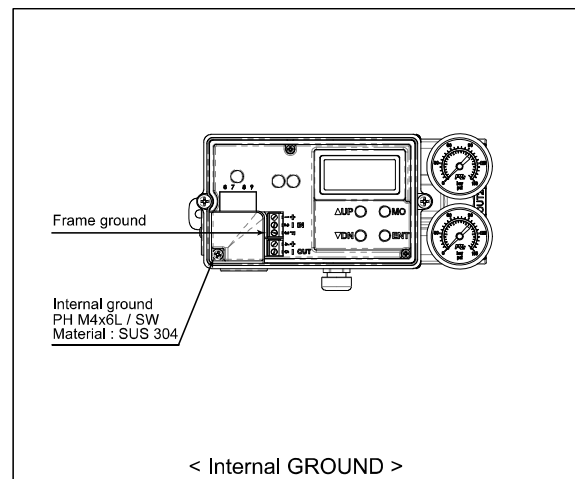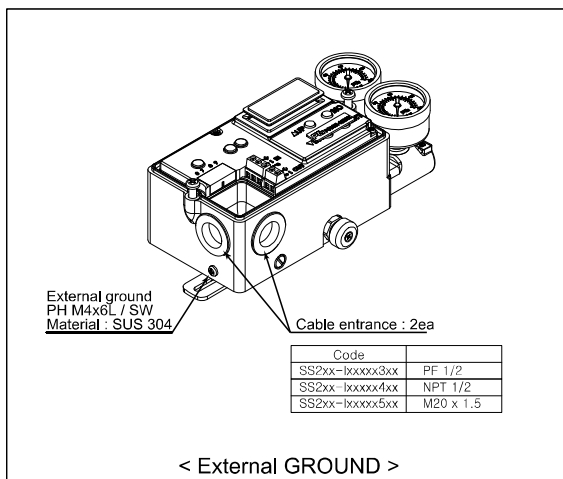

9.9 Wiring for Intrinsic Safety



The SS2L / SS2R positioner is designed to meet the intrinsic safety standards of IEC/EN 60079-0, IEC/EN 60079-11, EN 13463-1, EN 13463-5. But the SS2L / SS2R positioner can be affected by the electrical or magnetic energy from other electric products. So please make a note of the instructions below.

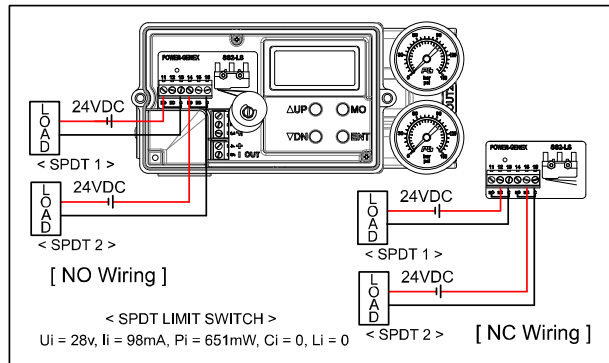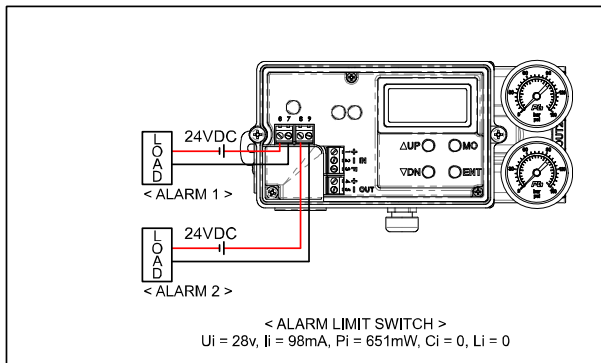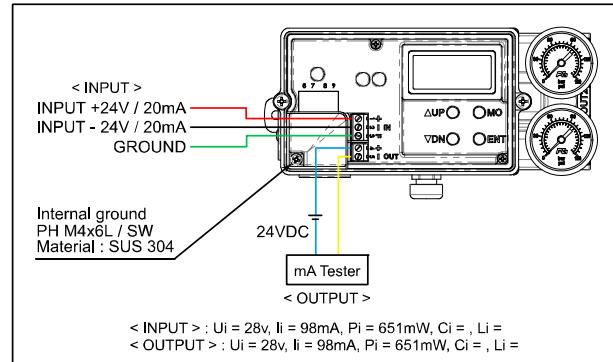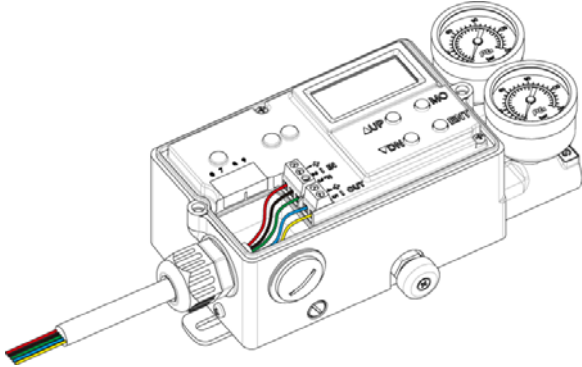

Input signal: 4~20mA@ 24VDC 2wire [red(+), black(-)]

Frame Ground: Green

Output signal: 24VDC 2wire [blue(+), yellow(-)]

2 x Alarm limit switch: 24VDC

2 x SPDT limit switch: 24VDC


1. Distinguish the intrinsic safety circuit and the non-intrinsic safety circuit, and separate the intrinsic safety circuit from other electrical circuit.
2. Install the proper safety device to block the static or electromagnetism.
3. If possible, minimize inductance and capacitance of wires. If the operating conditions are specified, try to keep inductance and capacitance as low as possible.
4. Protect wires from the external damage.
5. Ground in order to meet the operating regulations of the installation area.



- 1) The electronic card and the internal coils can be damaged in case of the input signals improper to the specifications of the SS2L / SS2R positioner.
- 2) The SS2L / SS2R positioner doesn't work in case of a wrong connection of '+' and '-'. Be sure to check the proper terminals before connection.
- 3) Ground internally and externally, if possible.
- 4) Try to keep the intrinsic safety parameters of the SS2L / SS2R positioner as low as possible. (U_i , I_i , C_i , L_i)
- 5) Be sure to install the safety barrier between the SS2L / SS2R positioner and a power supply source.

9.10 Cable Gland / Blind Plug

9.10.1 Cable Gland

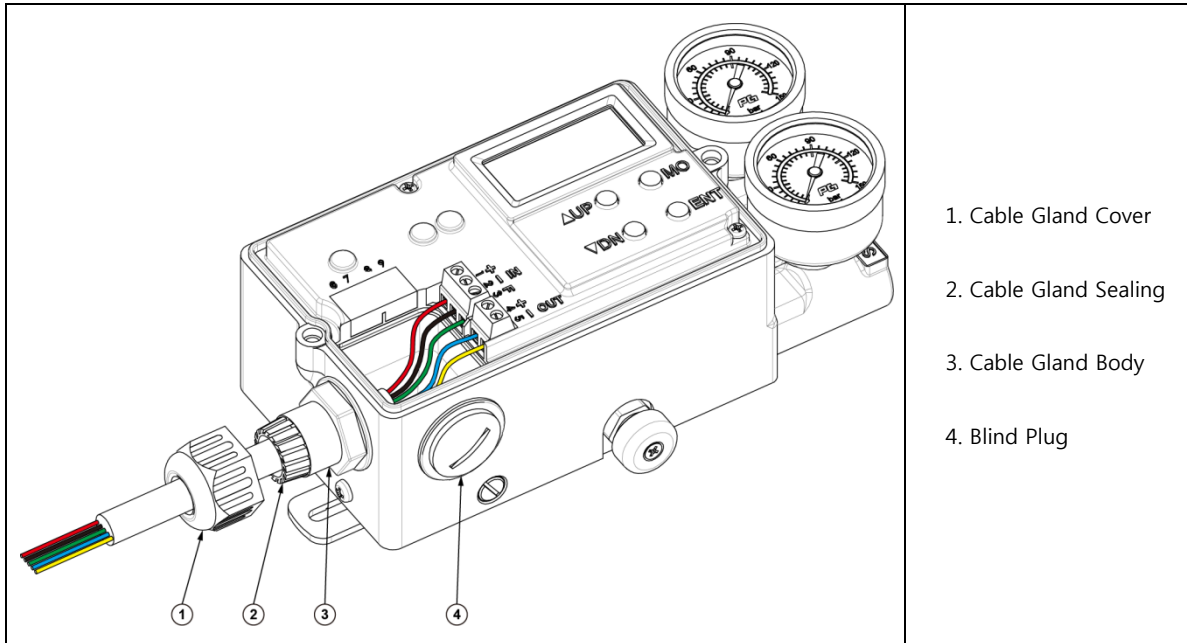

1. The cable gland is installed as above before delivery. Change the positions of the cable gland and the blind plug for installation on other side.
2. Turn the cover of the cable gland counter-clockwise to open, and insert wires.
3. Connect wires to terminals and tighten the cable gland.



- 1) Use the cable with diameter of Max. Ø 12.5 to Min. Ø 9.
- 2) Be sure to disconnect a power supply before the above process.


9.10.2 Blind Plug

1. Use the blind plug for the cable entry not used.
2. Install or dis-install the blind plug with the "–" screw driver.

10. Quick Auto-Calibration


10.1 Quick Auto-Calibration

Supply 4-20mA input signal and push MODE button for 5 seconds, auto-calibration process will start.

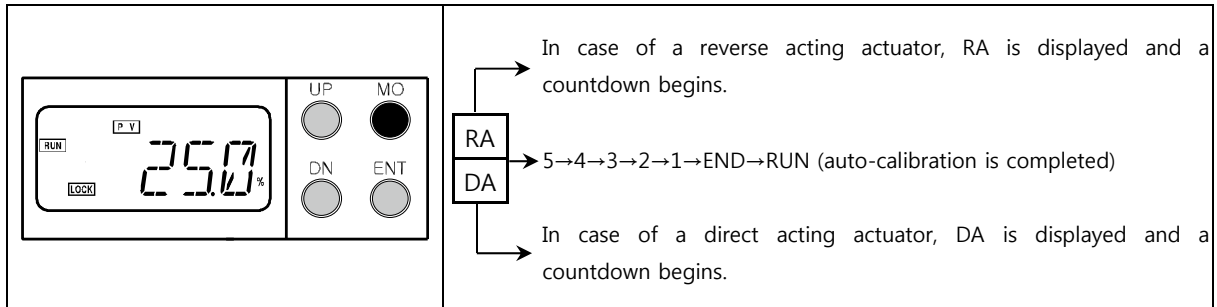


- ① It may take a longer time according to sizes of the control valve and the actuator. Generally, it will take 2 – 3 minutes with the standard size valve and actuator.
- ② If "MONT" is shown with the linear type SS2L positioner during an auto-calibration process, please make sure that the feedback lever is positioned horizontally at 50% open or close (See 11.4.6). Otherwise, please mount the SS2L positioner again.

- In case of the linear type SS2L positioner, "VALP / POSP" is shown as below. Please choose either VALP or POSP within 6 seconds by pushing the UP/DN button. Otherwise, "VALP" is set as standard.

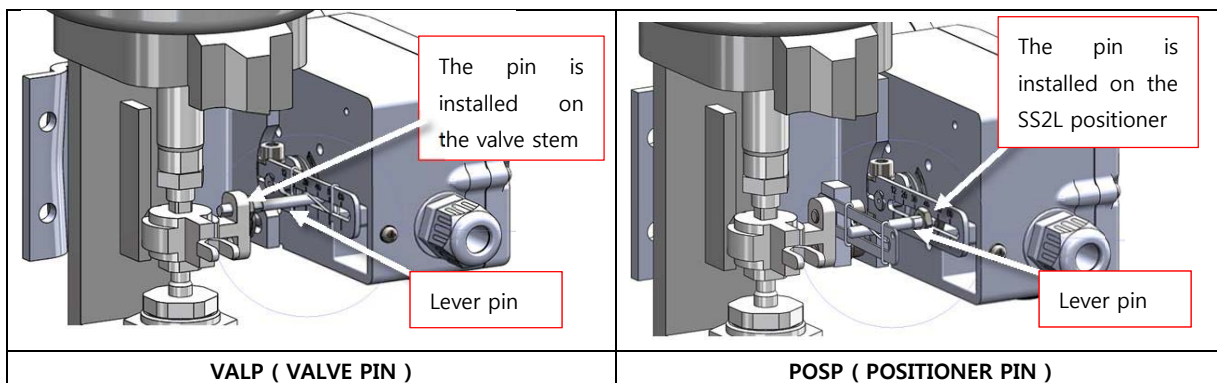

Note that if there is a difference between a selection of "VALP" or "POSP" and an actual installation of pin, it may cause a poor linearity.


10.2 Checking Ambient Temperature

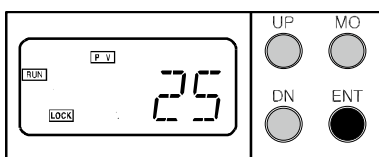

Keep pushing ENTER button, an ambient temperature surrounding the positioned will appear. Note that this ambient temperature appears only while pushing ENTER button.

11. Description of Parameters Flow

11.1 Parameters Flow Diagram

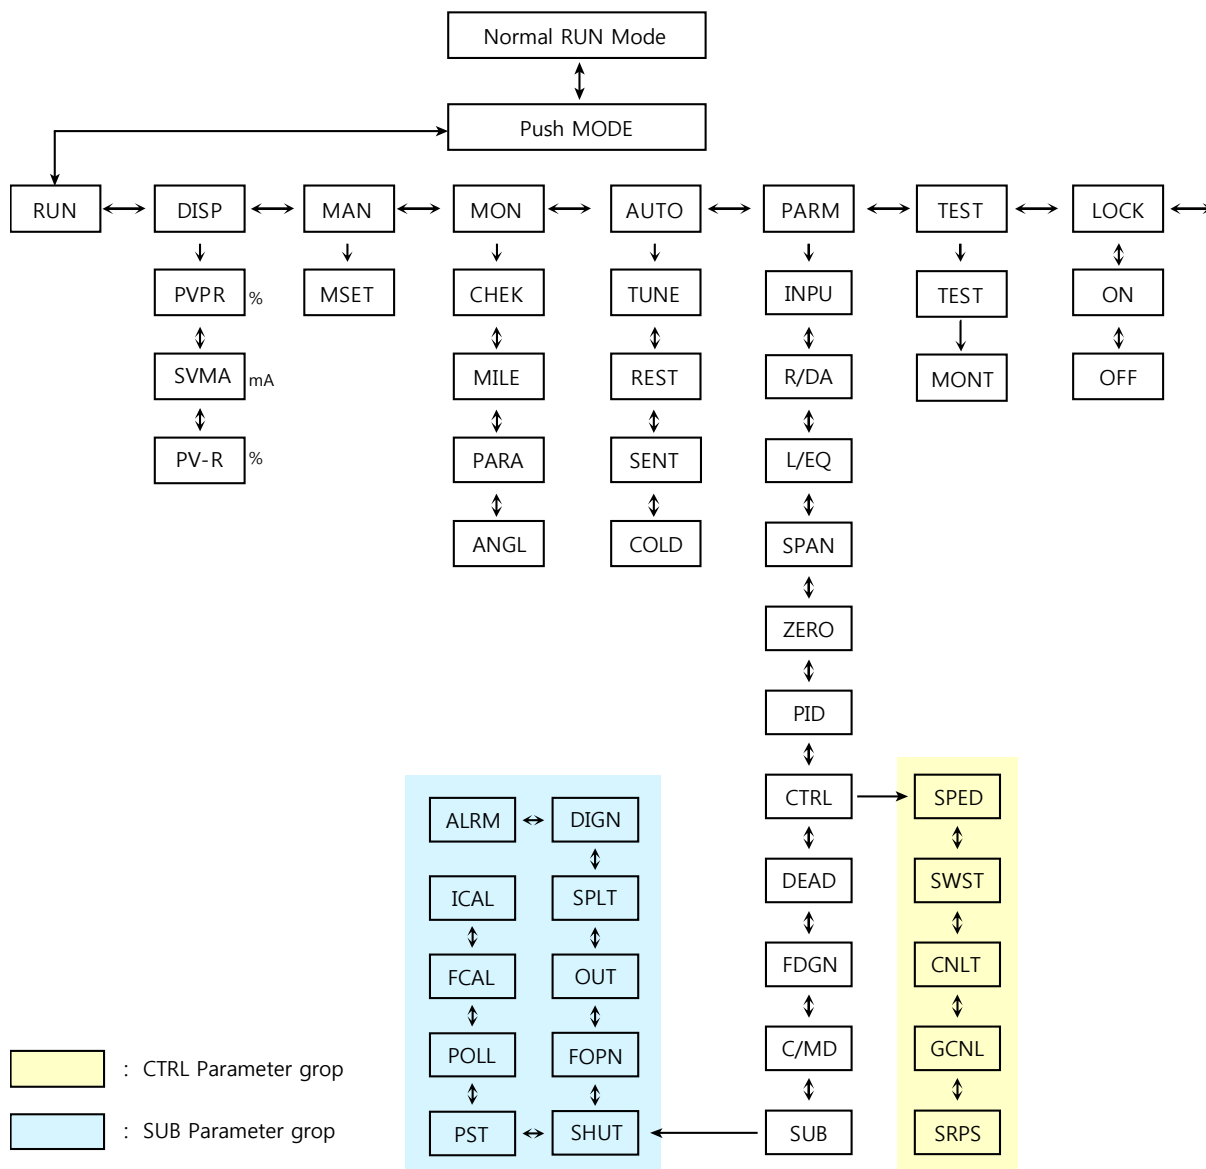

11.2 Main Parameters

Ref.	Parameter	Description	Function
11.4.2 (P. 30)	DISP	DISPLAY	changes the LCD display mode
	PVPR	PV % value	shows the current position by %
	SVMA	Input signal mA value	shows the input signal by mA
	PV-R	PV % value (reversed value)	shows the current position by % in a reverse way (Ex. PVPR – 10% → PV-R – 90%)

Ref.	Parameter	Description	Function
11.4.3 (P. 31)	MAN	MANUAL	operates the valve manually
	MSET	MANUAL-SET	operates the valve manually

Ref.	Parameter	Description	Function
11.4.4 (P. 32)	MON	MONITOR	checks the current status of the positioner
	CHEK	ERROR CHEK	checks the errors occurred to the positioner
	MILE	Runtime	checks the total valve runtime
	PARA	Registry memory values	checks the registry records in memory
	ANGL	Operating angle	displays the operating angle of the positioner shaft and feedback lever

Ref.	Parameter	Description	Function
11.4.5 (P. 33)	AUTO	AUTO-SET	performs auto-calibration and return to the factory settings
	TUNE	Auto-calibration	performs auto-calibration
	REST	RESET	returns to the factory settings
	STEN	START - END	re-sets the position of Zero and Span
	COLD	COLD START	re-boots the positioner

Ref.	Parameter	Description	Function
11.4.6	PARM	Sub-parameters	see the parameters on next page

Ref.	Parameter	Description	Function
11.4.7 (P. 33)	TEST	TEST MODE	tests the positioner
	MONT	Checking of mounting status	confirms the mounting status of the positioner

11.3 Parameters

11.3.1 Main Parameters

Ref.	Parameter	Description	Function	Default
11.5.1 (P. 36)	INPU	Input signal	4...20mA or 20...4mA	4...20mA
11.5.2 (P. 36)	R / DA	RA / DA	Reverse acting or direct acting	RA
11.5.3 (P. 36)	L / E.Q / QOPN/USER	Characteristic	Linear, E.Q. % (1:25 or 1:50), Quick open or User set (17points)	Linear
11.5.4 (P. 38)	SPAN	Span adjustment	0...100%	100%
11.5.5 (P. 38)	ZERO	Zero adjustment	0...99%	0%
11.5.6 (P. 39)	PID	P-GN / I-GN / D-GN	Proportional / Integral / Differential gain value	Auto-set
11.5.7 (P. 41)	CTRL	SPED / SWST / CNLT / GCNL	See 11.3.2 CTRL	.
11.5.8 (P. 42)	DEAD	Dead band	0...9.99%	0.5%
11.5.9 (P. 43)	FDGN	D-gain setting for hard mode	D-Gain setting for hard mode	Auto-set
11.5.10 (P. 43)	C/MD	NORM / HARD / SMAL	Standard actuator, strong valve packing friction, small actuator or angle seat valve	NORM
11.5.11 (P. 44)	SUB	Sub-Parameters	See 11.3.3 SUB	.

11.3.2 CTRL - Parameters (control speed adjustment)


Ref.	Parameter	Description	Function	Default
11.5.7.A (P. 41)	SPED	Response speed	1...1000	1000
11.5.7.B (P. 41)	SWST	Slow start	Smooth operation	Auto-set
11.5.7.C (P. 42)	CNLT	Control limit	50...1250	Auto-set
11.5.7.D (P. 42)	GCNL	Gap Control limit	100...650	Auto-set
11.5.7.E	SRPS		Control status	Auto-set

11.3.3 SUB - Parameter


Ref.	Parameter	Description	Function	Default
11.5.11.A (P. 44)	SHUT	Shut-off	0...9.9%	0.3%
11.5.11.B (P. 45)	FOPN	Full-open	0...9.9%	0.3%
11.5.11.C (P. 45)	OUT	Output signal	4...20mA or 20...4mA	4...20mA
11.5.11.D (P. 45)	SPLT	Split range	4...12mA or 12...20mA	4...20mA
11.5.11.E (P. 45)	DIGN	Display place	Movement to one or two decimal places	1
11.5.11.F (P. 46)	ALAM	Alarm limit low, high	AL1L/AL1H, AL2L/AL2H	0...10%, 90...105%
11.5.11.G (P. 48)	ICAL	IN4M / IN20	sets the values in accordance with 4~20mA input signals	Factory setting
11.5.11.H (P. 48)	FCAL	FB4M / FB20	sets the values in accordance with 4~20mA output signals	Factory setting
11.5.11.I (P. 49)	POLL	HART Polling Address	0...15	0
11.5.11.J (P. 49)	PST	Partial Stroke Test	checks a valve status	OFF

11.4 Setting of Main Parameters

The following abbreviations will be used hereafter.

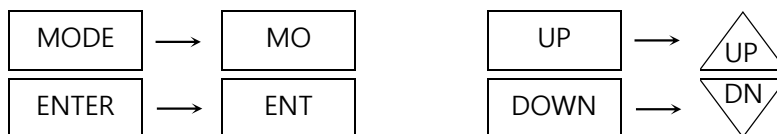


11.4.1 LOCK ON / OFF


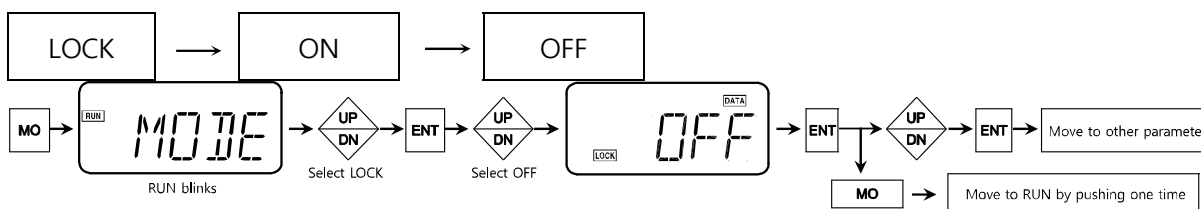


- ① LOCK ON : Saves all setting values.
- ② LOCK OFF : Be sure to LOCK OFF when it is necessary to read or change the selected parameters and the saved setting values.
- ③ Quick auto-calibration, Span, P-Gain can be carried out without LOCK Off (see "10. Quick Auto-calibration")
- ④ LOCK is on unless any input signal is not supplied.
- ⑤ It is difficult to read or change under LOCK ON situation.

 11.4.2 Display Mode



Selection of mA, % or in reverse way with values as shown

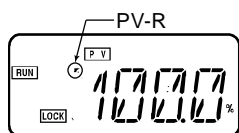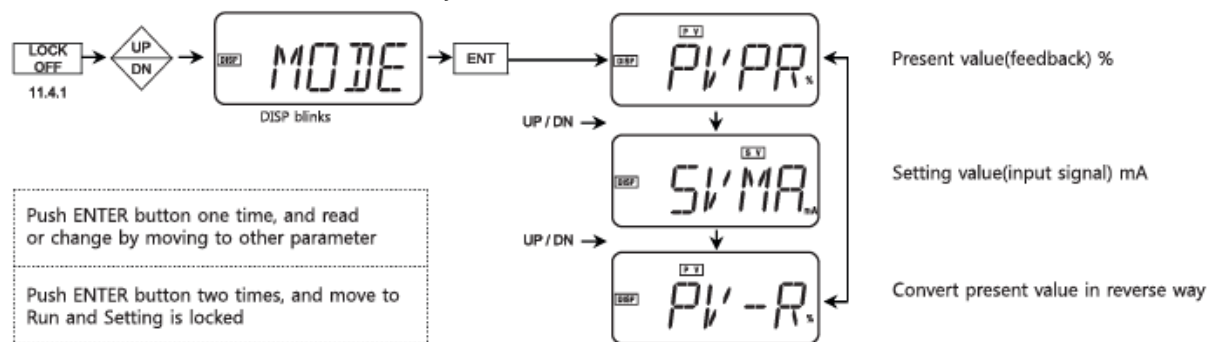


If PV-R is selected, the small point will blink as shown to the left.


Present value(PV) or setting value(SV) is displayed with mA or %. Setting value stands for input signal. If a control valve is a direct acting type and it is necessary to see the feedback values in a reverse way, select PV-R.

11.4.3 Manual Mode (default: 0)


The valve can be moved to 0 – 100% manually.

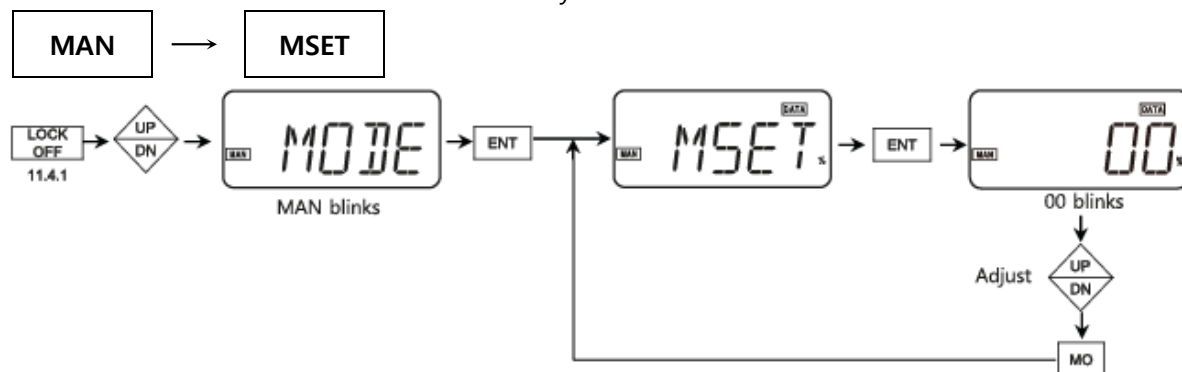

11.4.4 Monitor Mode

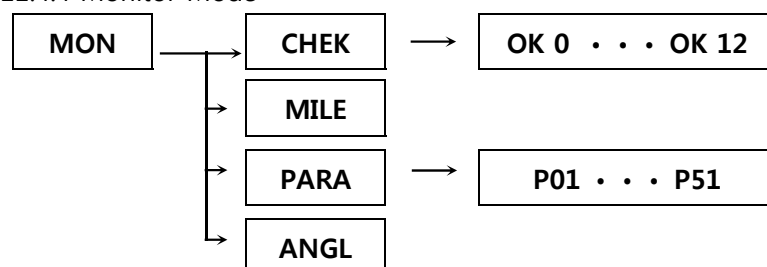

You can check the error codes and a total valve runtime.

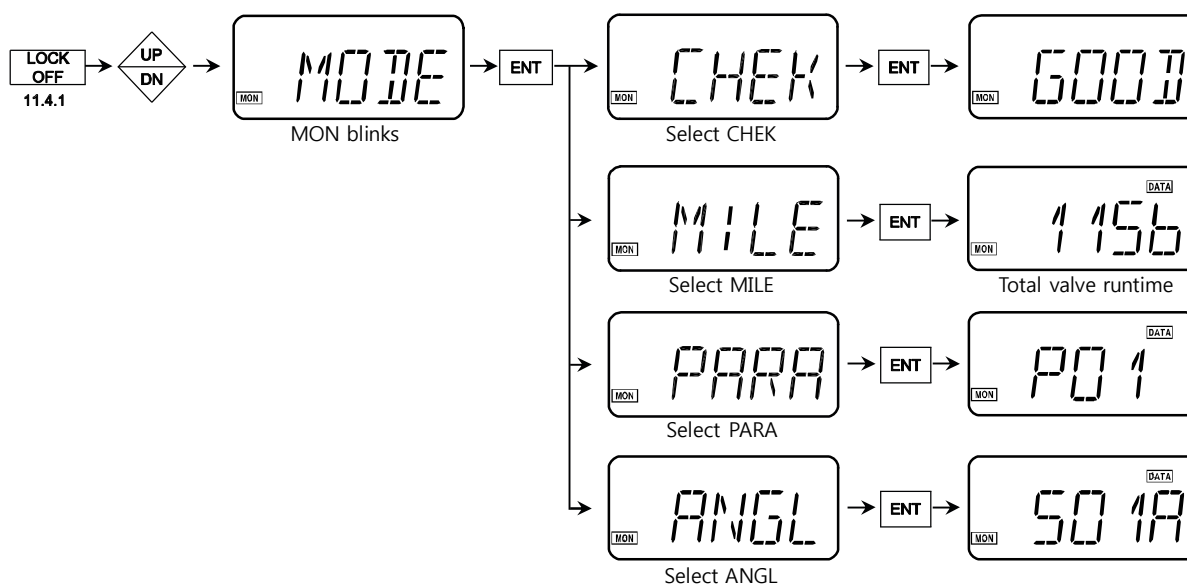


- ① Number 1 corresponds to 10 hour. For example, if 1156 appears, it means that this valve has been working for 11,560 hours.
- ② P01 to P61 are just for a factory setting and only for reference.
- ③ ANGL is a factory setting just for reference.

11.4.5 Auto-Calibration Mode



If necessary, initialize all setting values to the original values set after auto-calibration or return them to the factory setting values.


11.4.5.A Performing Auto-Calibration

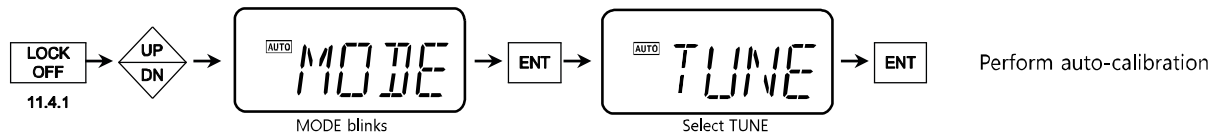

- ① Reverse acting (RA) is a standard factory setting. Even if air lines are connected wrongly by mistake, the SS2 positioner detects automatically and performs auto-calibration for direct acting (DA).
- ② If the actuator doesn't work with 4-20mA input signal properly, change air lines of OUT1 and OUT2 with each other and perform auto-calibration again.
- ③ For a reverse acting type (RA), a countdown will begin like RA-5-4-3-2-1-END.
For a direct acting type (DA), a countdown will begin like 5-RA-DA-4-3-2-1-END.

11.4.5.B Initializing Setting Values (RESET)

All setting values return to the standard factory setting values.

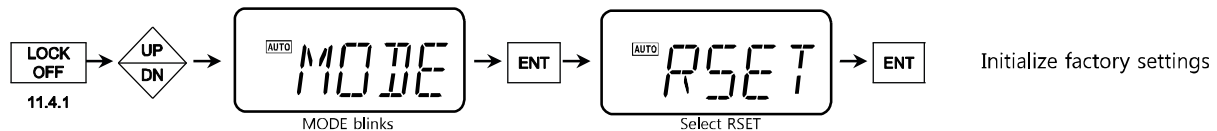


11.4.5.C Re-adjustment of Zero & Span (STEN)

Only Zero and Span is re-set without changing other values set after auto-calibration.


11.4.5.D Re-booting (COLD)

 11.4.6 Self-Test Mode



- The current valve mounting situation is shown. If the value is far away from 50, the valve will suffer from a poor linearity and hysteresis. Move the positioner and try to reach closer to 50 for the best linearity and hysteresis.


- How to set MONT

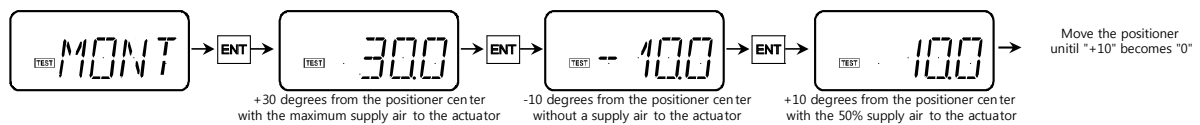

For information, in "MONT", the operating range (0~10kΩ) of the potentiometer is displayed as %.


- Step 1: Select MONT, and the valve will be fully open or closed and also the actual valve position will be shown as %. If the valve doesn't move any longer, push the ENT button.
- Step 2: If the ENT button is pushed on Step 1, the valve will be fully open or closed and also the actual valve position will be shown as %. If the valve doesn't move any longer, push the ENT button.
- Step 3: If the ENT button is pushed on Step 2, the actual valve position is shown as % in case of the 12mA input signal (50%) by using the actual valve positions got on the above Step 1 and Step 2. The positioner can get the best linearity at the actual valve position of 50%. Move the positioner up or down so that the valve position shown can reach closer to 50 and fix the mounting bracket tightly.

11.5 Parameters Flow Diagram

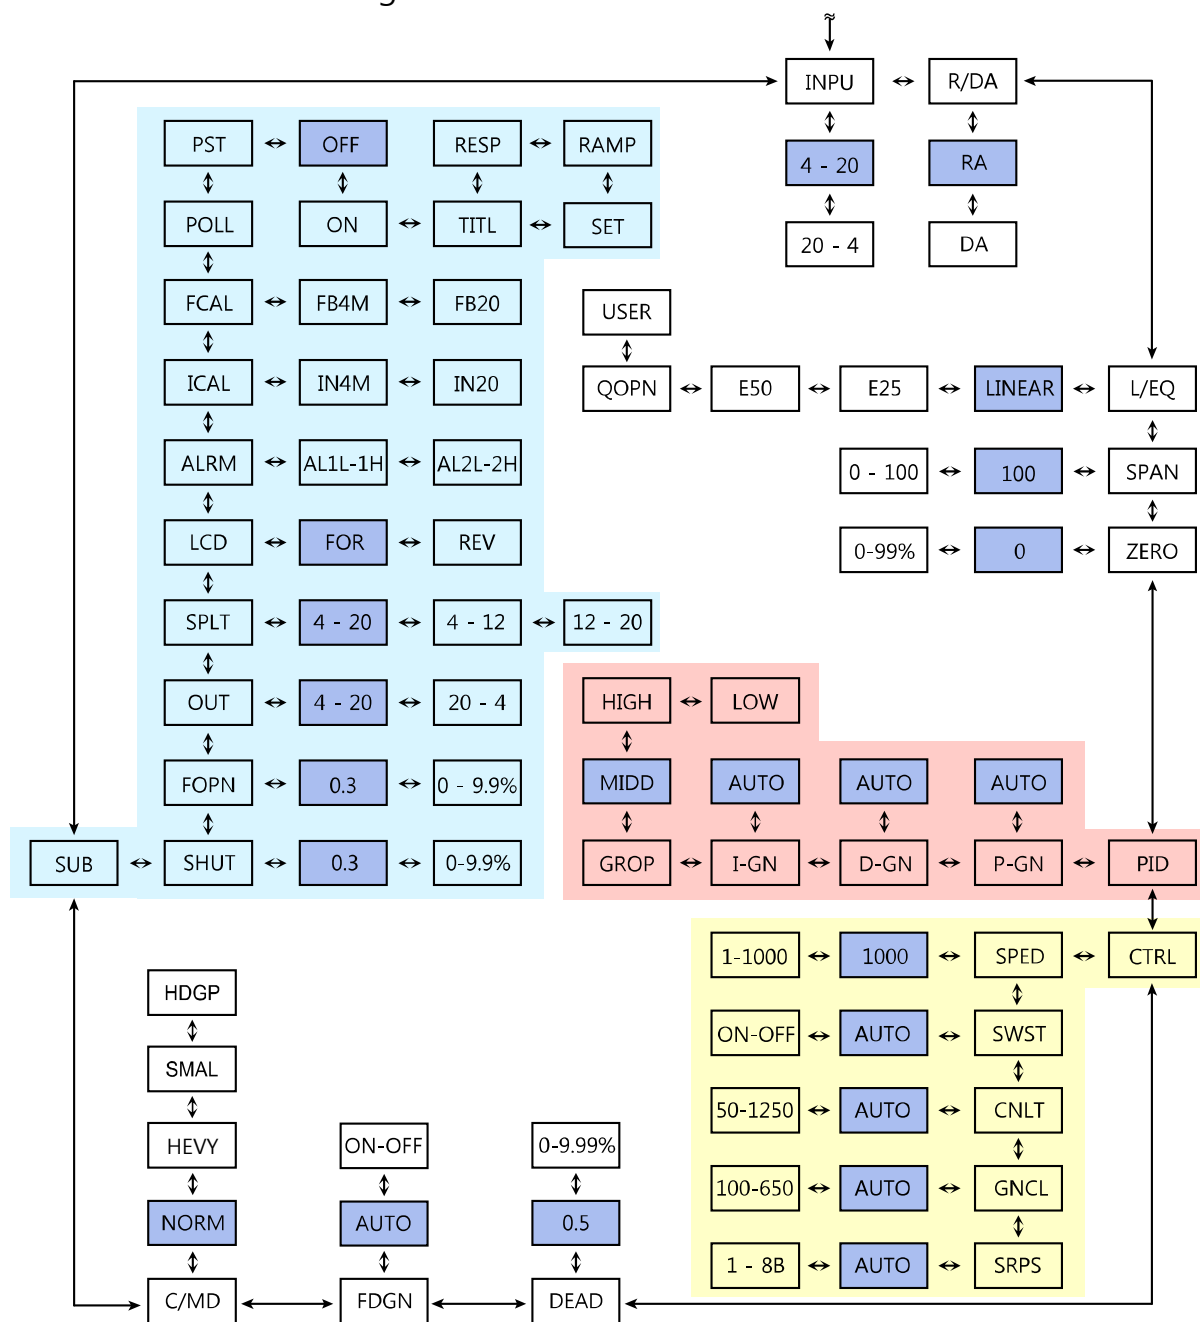


The colored cells stand for the standard factory settings.


All setting values return to the standard factory settings if RESET begins.

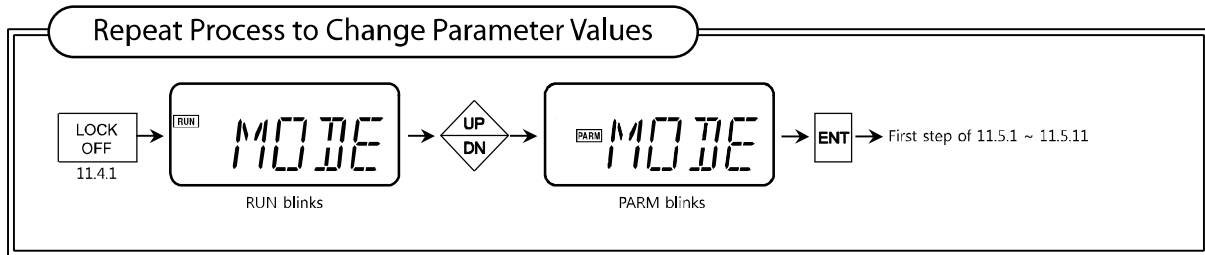


 
11.5.1 [INPU] Change of Input signal (default: 4-20mA)



It is possible to make the positioner respond to 20-4mA input signals optionally even though 4-20mA input signals are supplied.

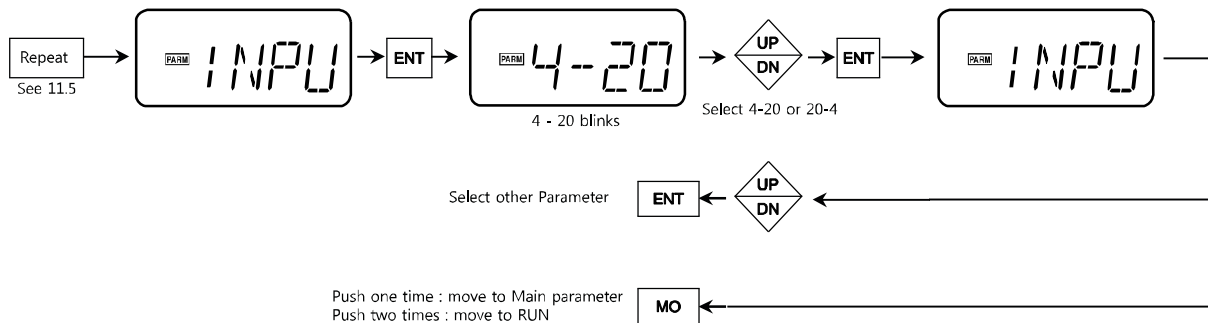

 
11.5.2 [R/DA] Selection of Direct Acting (DA) or Reverse Acting (RA) (default: RA)

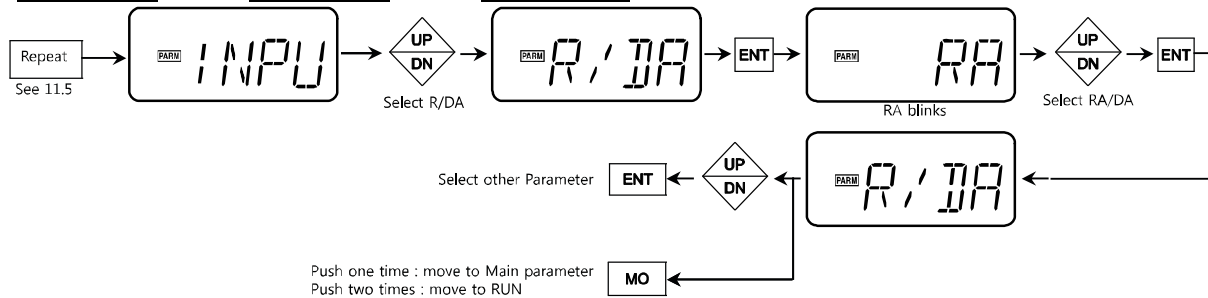


11.5.3 [L/EQ] Change of Linear, E.Q.%, Quick Open or User Set (default: Linear)




The valve characteristic can be changed to Linear, 1:25 EQ%, 1:50 EQ%, Quick Open or User Set.

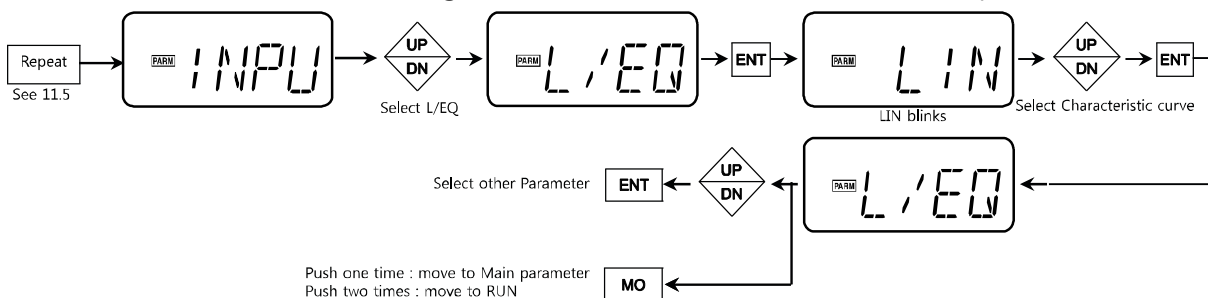

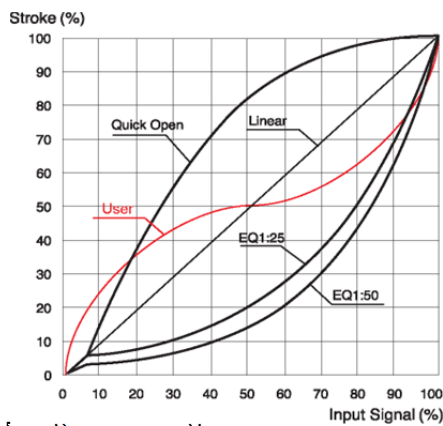


PARAM LIN	Linear
PARAM E25	EQ% (1 / 25)
PARAM E50	EQ% (1 / 50)
PARAM QOPN	Quick Open
PARAM USER	User set(17point)

- For the user setting,

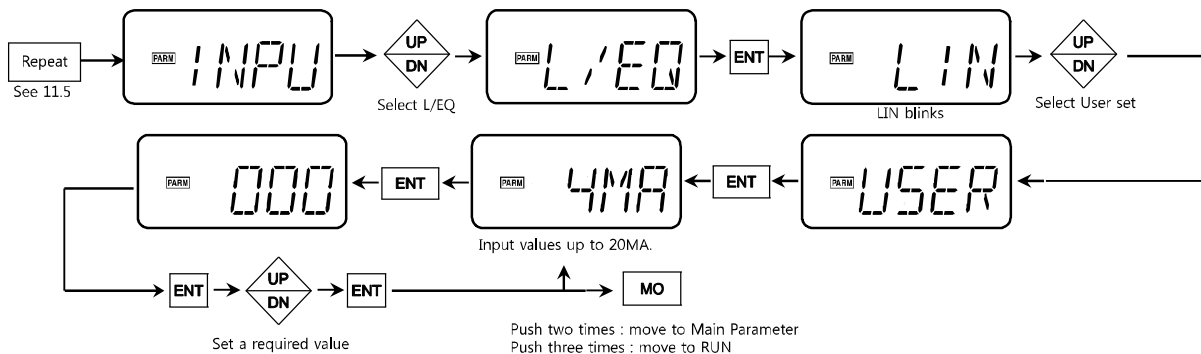


Example 1)

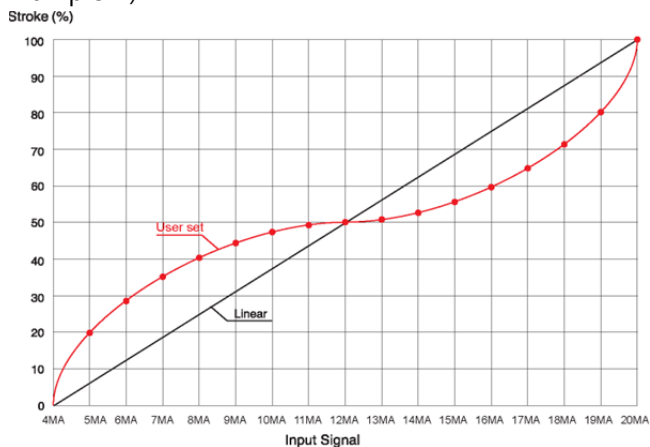


User Set Value			Ex-1	Ex-2
Point	Parameter	Input Signal (mA)	Valve Opening% (set value)	
1	4MA	4mA	0	50
2	5MA	5mA	20	30
3	6MA	6mA	29	20
4	7MA	7mA	35	15
5	8MA	8mA	40	10
6	9MA	9mA	45	6
7	10MA	10mA	48	4
8	11MA	11mA	49	2
9	12MA	12mA	50	0
10	13MA	13mA	51	3
11	14MA	14mA	52	7
12	15MA	15mA	55	11
13	16MA	16mA	60	20
14	17MA	17mA	65	30
15	18MA	18mA	71	43
16	19MA	19mA	80	60
17	20MA	20mA	100	100

Example 2)

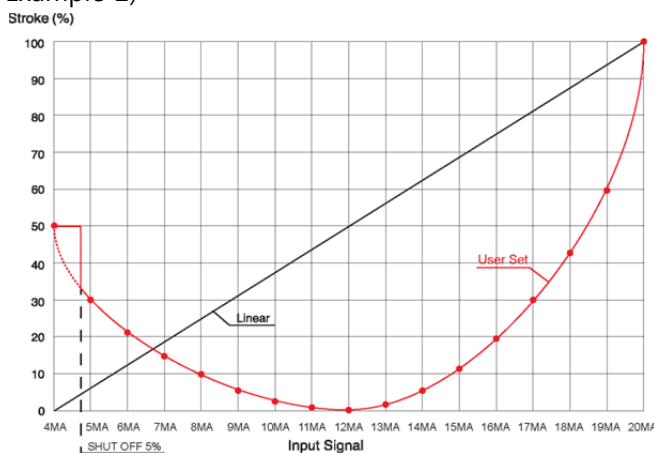


NOTES
<p>1. This user setting has a linear characteristic as standard.</p> <p>2. 5MA means % corresponding to 5mA.</p> <p>3. Input all 4MA to 20MA for a required user set characteristic curve.</p> <p>※ If Shut Off option is set, the set value at 4mA is maintained during interval of the Shut Off setting value as shown in Example 2). The curve goes according the user set value after interval of the Shut Off setting value. (0.3% is the default value of Shut Off.) As Shut-Off is set to 5% in Example 2), the curve maintains by 50% from 4 to 4.8mA and moves forward according to the user set.</p>

11.5.4 [SPAN] Span Adjustment (default: 100)


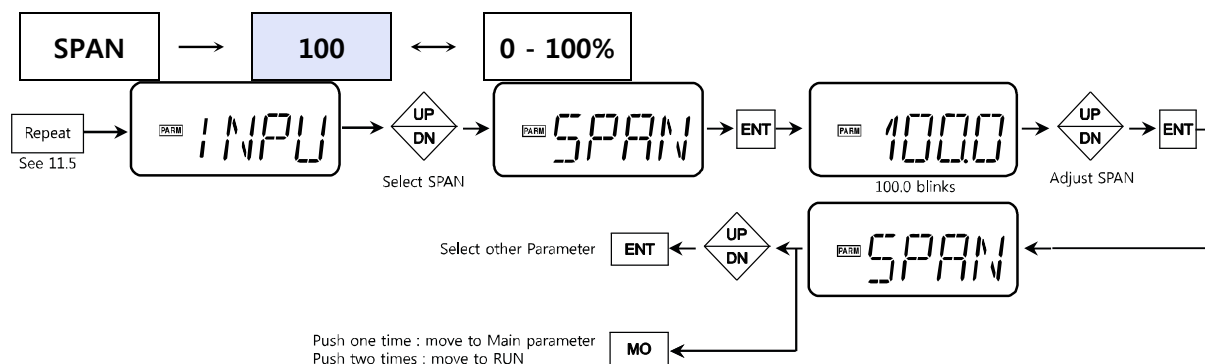


- ① Be sure to supply 20mA input signal before adjusting SPAN.
- ② Push ▼ DN button one time, Span will decrease by 0.1%. Keep pushing ▼ DN button, Span will decrease fast.
- ③ For a quick Span setting, push ▼ DN button for 5 seconds. (see 10.2)


11.5.3 [ZERO] Zero Adjustment (default: 0)

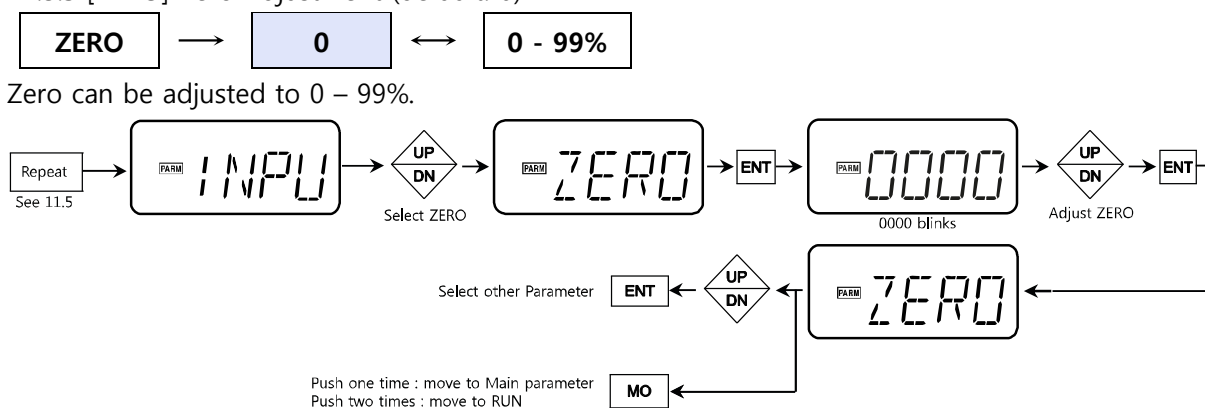

11.5.6 PID-Gain

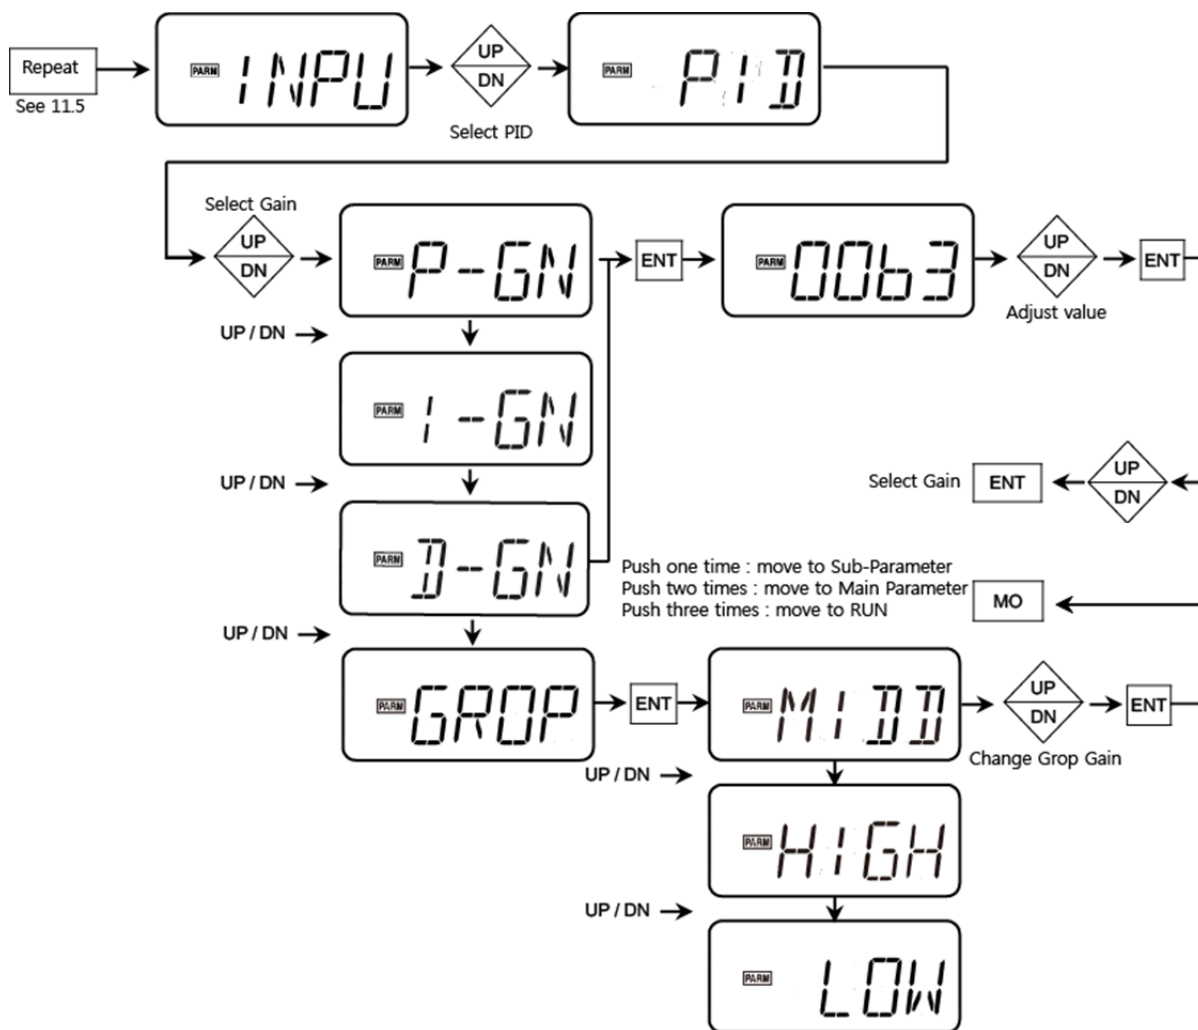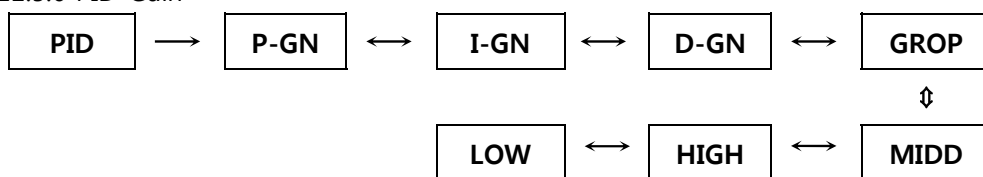


 11.5.6.A P-Gain (Proportional Gain)




The micro-processor calculates P-Gain value during auto-calibration process in consideration of sizes of the valve and the actuator. If a hunting problem happens, decrease P-Gain value. If an oscillation problem happens, increase P-Gain value. P-Gain values are different according to the working conditions. In case of a small actuator, increase or decrease 5 to 10. In case of a big actuator, increase or decrease by 20 to 30.

 11.5.6.B I-Gain (Integral Gain)



As I-Gain is set automatically during auto-calibration process, it is not necessary to change manually.

 11.5.6.C D-Gain (Differential Gain)




As D-Gain is set automatically during auto-calibration process, it is not necessary to change manually.






 - ① Push MO button one time in order to move to ten figures or hundred figures.
- ② For a quick P-Gain setting, push UP button for 5 seconds. (see 10.3)

11.5.6.D GROP-Gain Adjustment (GROP)




 
GROP consists of 3 kinds of gain according to Control Mode (MIDD, HIGH, LOW). Most hunting or oscillation problems can be solved by selecting HARD in Control Mode. But if it is necessary to adjust PID values, MIDD, HIGH, LOW can be selected without a full understanding of PID control.

Parameter	Status	Description
		Standard parameter
	Hunting is happening	Change to Hard mode in case of a hunting problem (by rapid under or overshooting)
	Oscillation is happening	Change to Low mode in case of an oscillation problem (by slow under or overshooting)




Keep pushing UP button for 3 seconds and move to GROP.

 
11.5.7 [CTRL] – Control Speed Adjustment

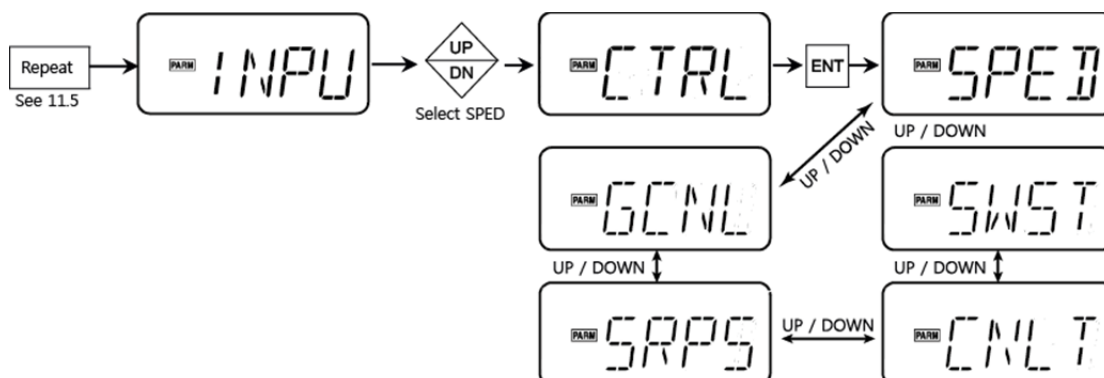



 
11.5.7.A [SPED] – Respond Speed Adjustment (default: 1000)



 This is to adjust the response speed of the control valve. (Min: 1, Max: 1000)



  11.5.7.B [SWST] – Slow Start (default: automatically-set)

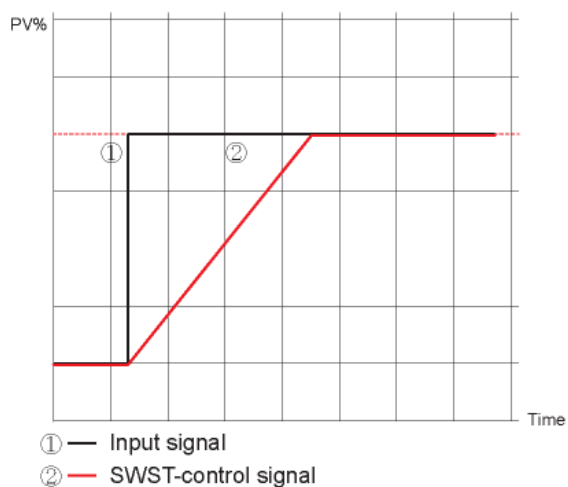




This is to make a valve work slowly. In case of a small actuator, a hunting problem can happen due to a fast movement. This hunting problem can be solved with SWST parameter.



SWST is set automatically during an auto-calibration process if it takes a valve below 1 second to move from 0 to 100%.

  11.5.7.C [CNLT] – Control Limit (default: automatically-set)



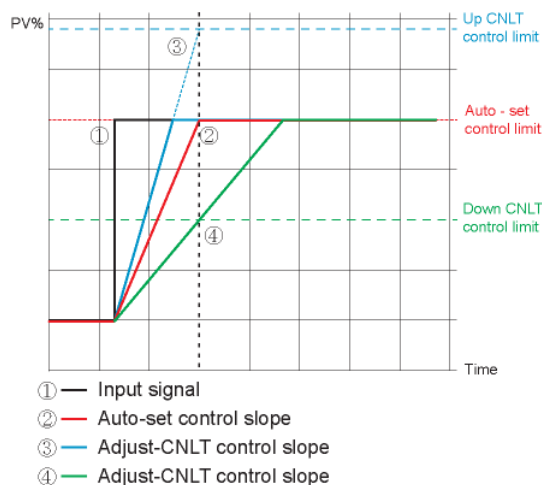


CNLT is to limit a control range and set automatically during an auto-calibration process. When 0% - 100% input signal is supplied, a recognition range of the positioner is settled according to CNLT.

If CNLT is increased as shown in Graph 3, a control speed can become faster but a hunting problem can happen. If CNLT is decreased as shown in Graph 4, a control speed can become slower but the positioner works more stably.


CNLT can be adjusted by 100.

 11.5.7.D [GCNL] – Gap Control Limit (default: automatically-set)



GCNL is to control a whole operating range. If the valve comes within $\pm 3\%$ of input signal, GCNL works with 1/2 value of CNLT for a safer control. In case that a hunting or oscillation problem happens around the position related to the input signal, a safer control can be accomplished by lowering GCNL.

 11.5.7.E [SRPS] (default: automatically-set)



SRPS is the fast and easy setting to make the positioner work smoothly according to the working condition of the valve.


	For a stable control with an air volume booster - Open the booster orifice by 60 – 90% before auto-calibration and set to 1BST, perform auto-calibration again. - Open more booster orifice in case that a hunting problem happens.
	Reduce D-Gain than setting at 4N.
	Standard setting
	Minimize a problem of over-shooting or under-shooting in case of the spring return type actuator - Automatically set in case of over-shooting or under-shooting during auto-calibration

	Control the positioner without activating the CONTROL LIMIT mode.
	Solve a failure of auto-calibration with a big volume actuator. - After setting to 8B perform auto-calibration again.




Note that auto-calibration should be performed again after SRPS is set first.

 11.5.8 [DEAD] Setting of Dead Band (default: 0.5)




If there is a difference between Setting Value(SV) and Present Value(PV), adjust Dead Band to 0 - 9.99%.

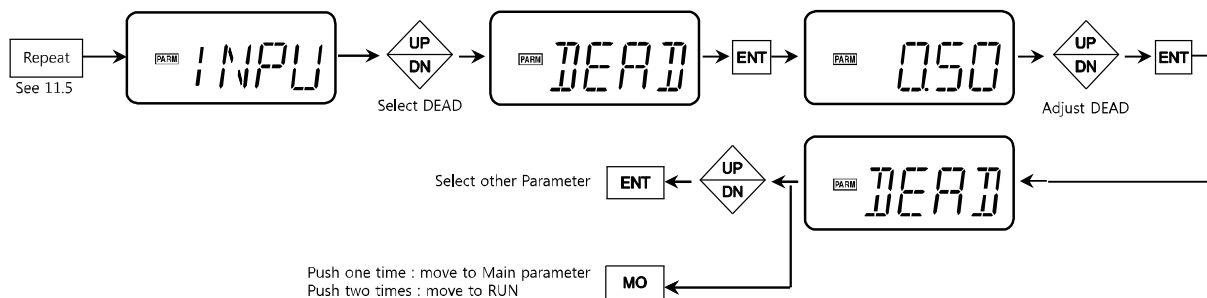

0.5% is a standard factory setting. For reference, 0.50 corresponds to 0.5% and the maximum value is 9.99 % (9.99).

 11.5.9 [FDGN] HARD Mode FAST D-Gain



HARD mode BIOS is available only when Control Mode is set to HARD. It is not available with setting of NORM or SMAL.

FDGN is used for a more stable valve control and set automatically during auto-calibration. The user can re-set the FDGN value manually.


More power (pneumatic torque) is required to move a valve with a strong friction packing and it can cause a hunting or overshooting problem by inertia. By way of prevention, when the positioner reaches to a desired position, air is charged or discharged momentarily for a more stable valve control.





The FDGN value stands for the volume of air charged or discharged. If the FDGN value is set too high, a hunting problem can happen. If too small, FDGN will not be effective.

11.5.10 Control Mode according to Valve Working Condition

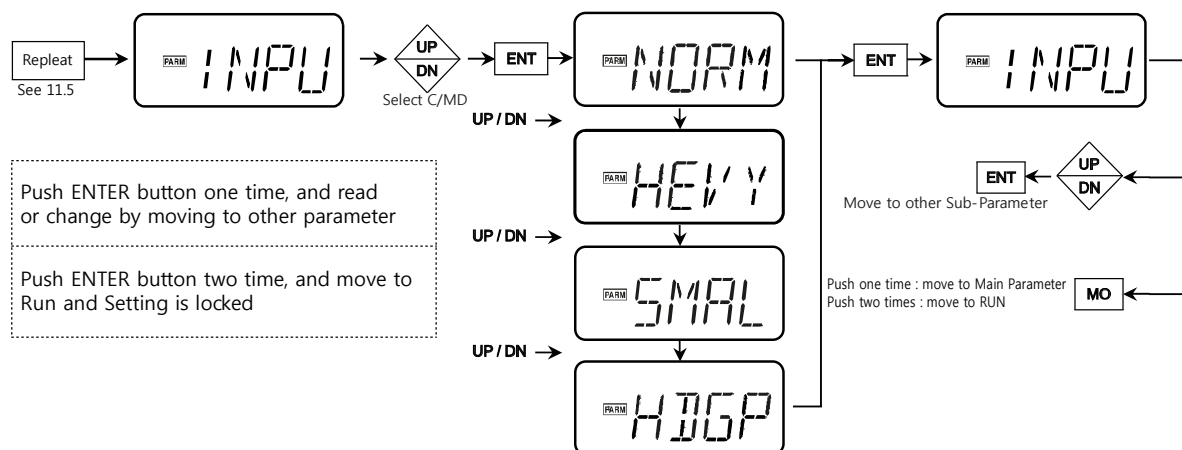

 Control Mode is set automatically during auto-calibration. But it can be set manually for the current valve working condition in case of a hunting problem or an overshooting problem.




	In case of a normal actuator
	In case of a big actuator
	In case of a small actuator
	In case of a big packing friction




1. Please carry out auto-calibration again in case that it is changed to HDGP from NORM, SMAL or HEVY.
2. It is not necessary to carry out auto-calibration again in case that it is changed to NORM from SMAL or to SMAL from NORM.
3. Please try to set both C/MD and GROP-GAIN for a more stable performance.

11.5.11 SUB Parameter

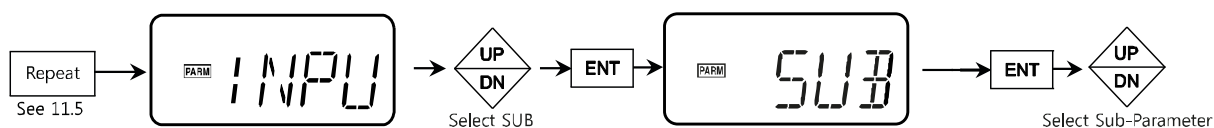

Ref.	Parameter	Description	Function	Default
11.5.11.A		Shut-off	0...9.9%	0.3%
11.5.11.B		Full-open	0...9.9%	0.3%
11.5.11.C		Output signal	4...20mA or 20...4mA	4...20mA
11.5.11.D		Split range	4...12mA or 12...20mA	4...20mA
11.5.11.E		Change of Display Position on LCD	Forward or reverse direction	FOR
11.5.11.F		Alarm limit low, high	AL1L/AL1H, AL2L/AL2H	0...10%, 90...105%
11.5.11.G		IN4M / IN20	Set to values relating to 4-20mA input signal	Factory setting
11.5.11.H		FB4M / FB20	Set to values relating to 4-20mA output signal	Factory setting
11.5.11.I		HART Polling Address	0...15	0
11.5.11.J		Partial Stroke Test	Checks a valve status	OFF
11.5.11.K		Profibus address	Changes the Profibus address	126

 
11.5.11.A [SHUT] Valve Shut-off Control (default: 0.3)



It is a safety function to close a valve completely. And it is possible to change 0% to 9.9%. For reference, 0.1% means that the positioner responds to 0.016mA. Therefore, the standard value of 0.3% means that a valve is closed at 4.048mA completely.



 
11.5.11.B [FOPN] Valve Full Open Control (default: 0.3)



The valve can be fully open manually. And it is possible to change 0% to 9.9%. For reference, 0.1% means that the positioner responds to 0.016mA. Therefore, the standard value of 0.3% means that a valve is fully open at 19.952mA.



 
11.5.11.C [OUT] Setting of Output Signal (default: 4 - 20mA)



4 - 20mA is set as a standard factory setting. It is possible to change to 20 - 4mA.



 
11.5.11.D [SPLT] Split Range Setting (default: 4-20)



Split range can be set to 4-12mA or 12-20mA.



 
11.5.11.E [LCD] Change of Display Position on LCD



LCD is to change the display position on LCD in case that the positioner is installed upside down.

LCD : FOR	LCD : REV	LCD : REV


11.5.11.F [ALRM] Setting of Alarm Limits (default: 0 – 10%, 90 – 105%)

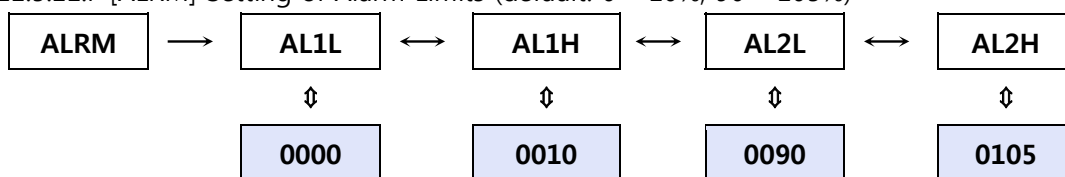


You can set an opening point or a closing point of a control valve. AL1 (L, H) is set to 0 – 10% and AL2 (L, H) is set to 90 – 105% from the factory as standard.

For example, see the below in order to re-set AL1 to 20 – 40% (AL1L = 20, AL1H = 40).

① AL1L Setting

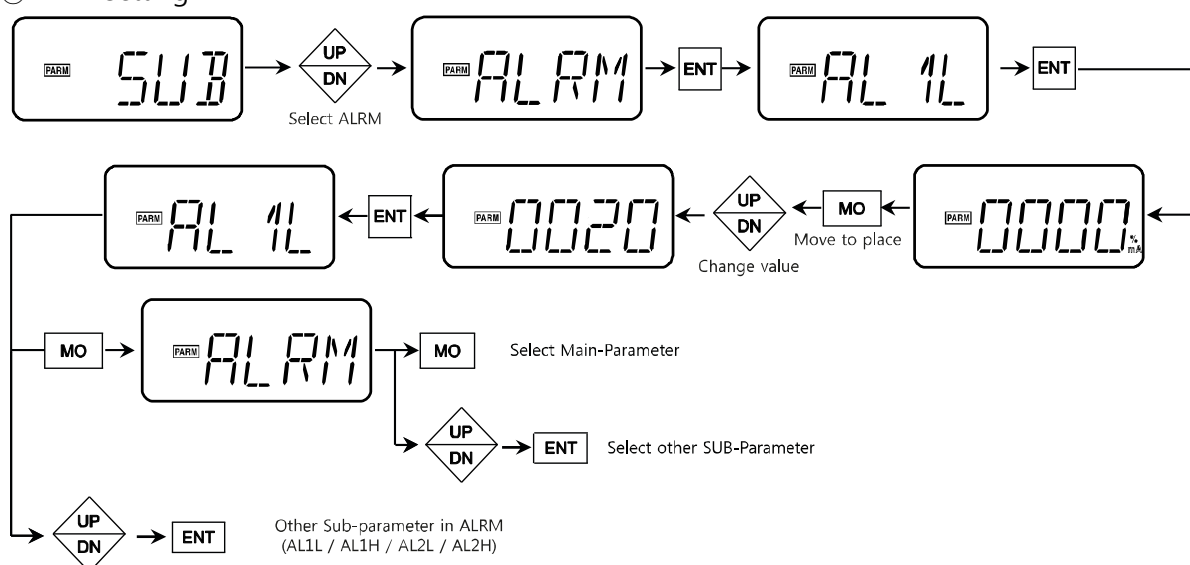


② AL1H Setting

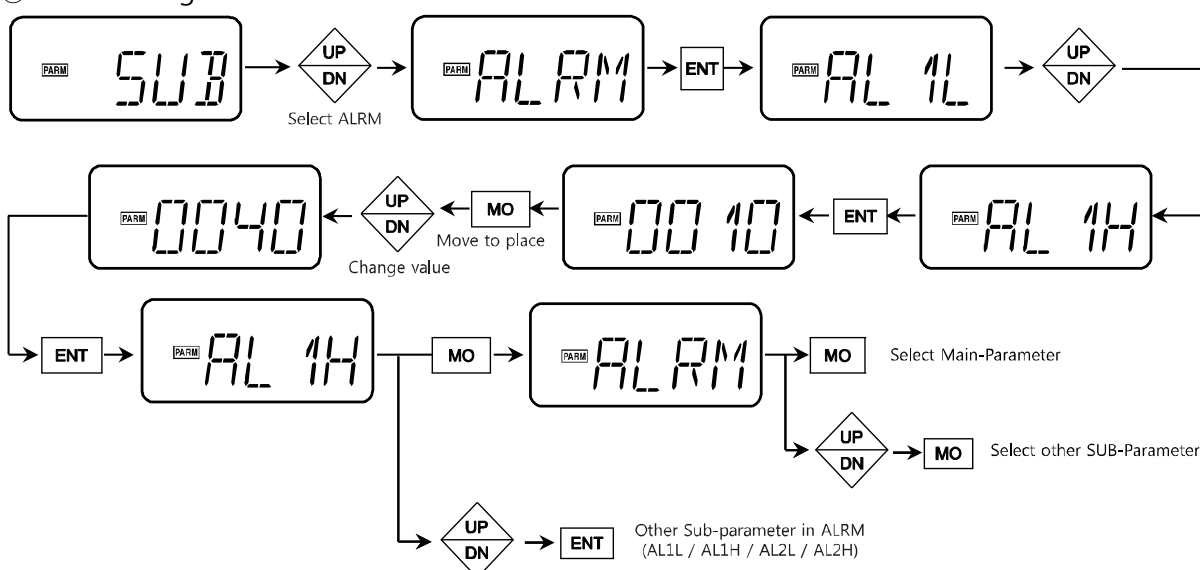


For example, see the below in order to re-set AL2 to 80 – 100%(AL2L = 80, AL2H = 100).


① AL2L Setting

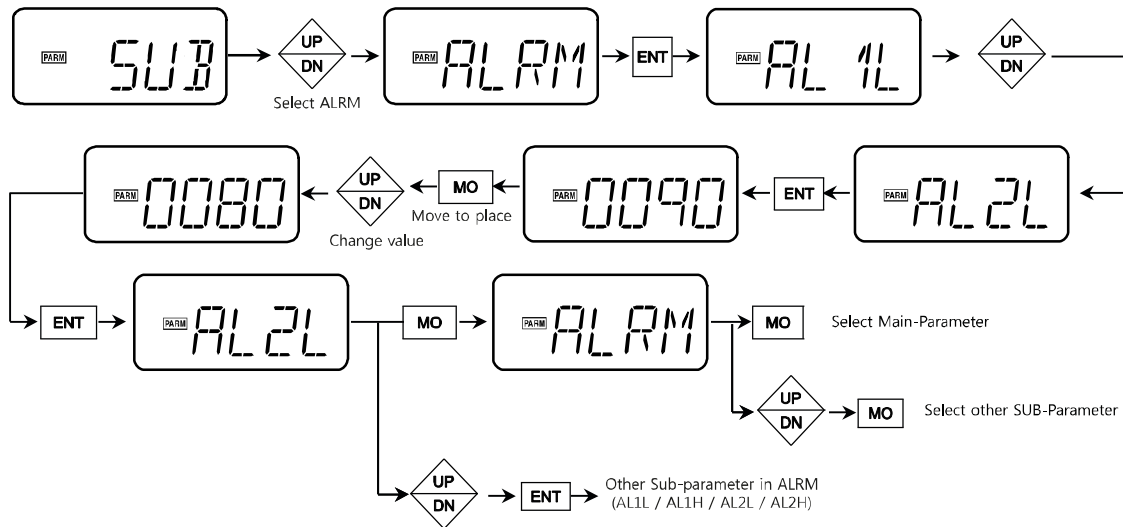

② AL2H Setting

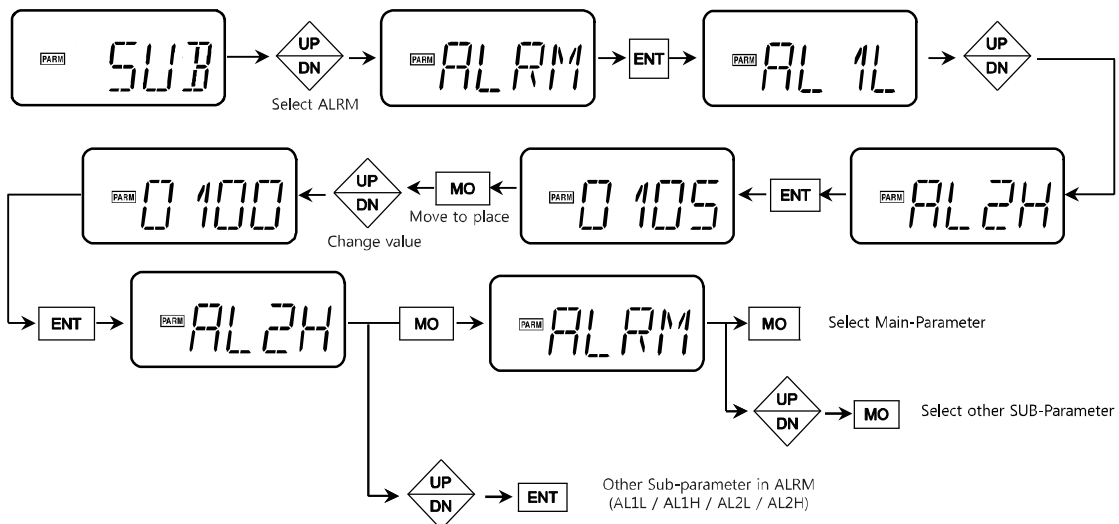


How to wire the Alarm Limits

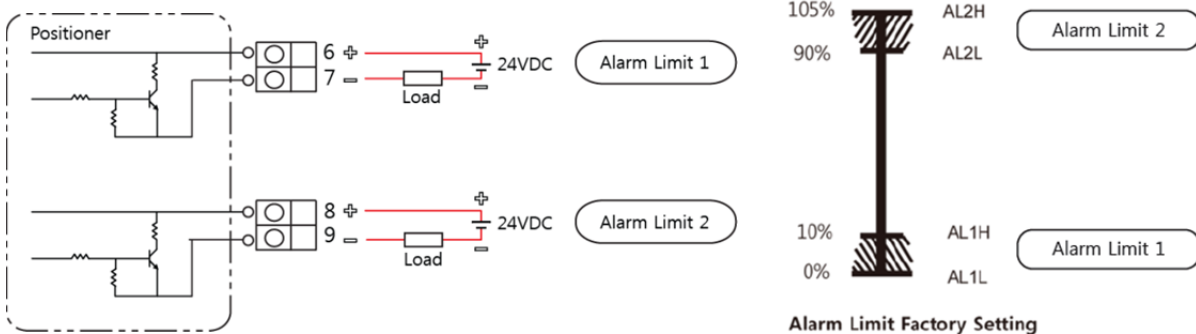


24VDC should be supplied for alarm limits.

 11.5.11.G [ICAL] – Setting of Input Signal (default: factory setting)




This is to match 4mA and 20mA input signals from a signal calibrator with the internal setting 0% and 100% of the positioner and save onto memory.

If 4mA output signal is measured as 4.2mA and 20mA output signal as 19.8mA with a signal calibrator on site, 4.2mA can be recognized as 0% and 19.8mA as 100% by re-setting with ICAL.

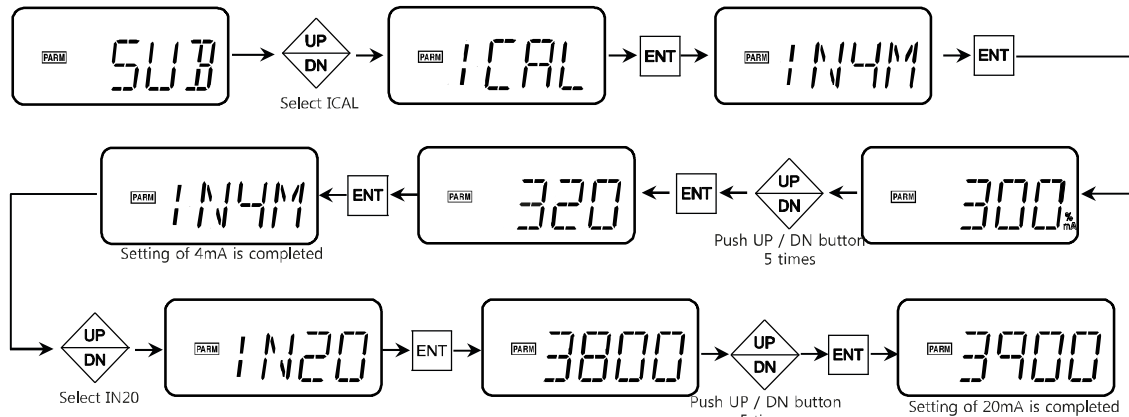

If ICAL is set at 4mA and 20mA, the middle output signals between 4mA and 20mA are set automatically. See [11.5.3 L/EQ] if it is necessary to change other characteristic curve.

 
11.5.11.H [FCAL] – Setting of Output Signal (default: factory setting)




This is to re-set the 4 – 20mA output signals coming from the positioner.

The factory setting is that 4mA is sent at 0% and 20mA is sent at 100%.


<Setting of FB4M>

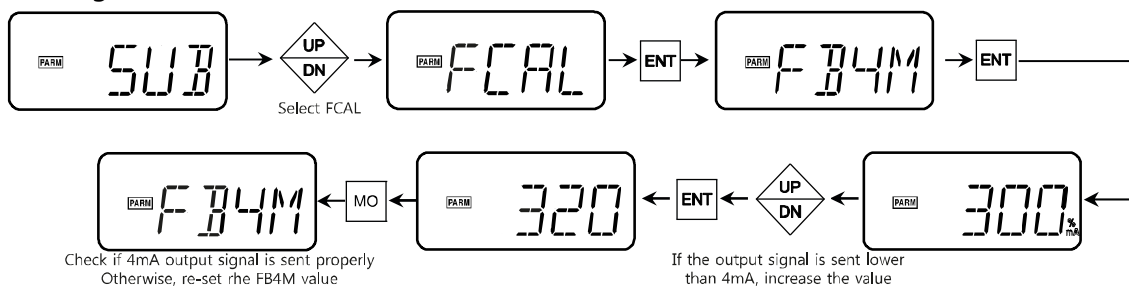

<Setting of FB20>

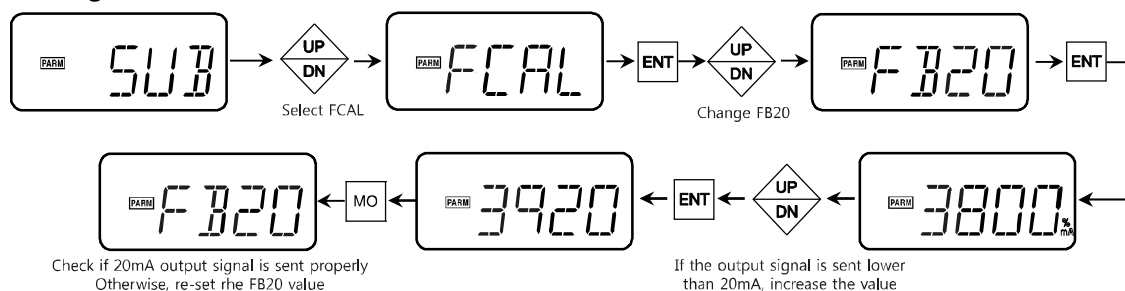

 11.5.11.I [POLL] – HART Communication Polling Address (default: 0)




 This is to select one of HART communication polling address (0 ~ 15) on site. The default address is "0".










As an unexpected problem can happens during communication, try to select after disconnecting HART communication.

11.5.11.J [PST] – Partial Stroke Test (default: OFF)




This is to move the valve periodically regardless of input signals and check the valve status.


	<ul style="list-style-type: none"> - to set the TEST time interval (default: '0024' – 24 hours) - Setting of '0000' shows the PST working status every 1 minute.
	<ul style="list-style-type: none"> - to set the moving point by % during TEST (default: 10%) - Valve position > 50% : move to the decreasing direction - Valve position < 50% : move to the increasing direction
	<ul style="list-style-type: none"> - to adjust a moving range per second (default: 1.0%/sec) - One of 1.0, 0.5, 0.25, 0.12, or 0.06%/sec can be selected.
	<ul style="list-style-type: none"> - to adjust a waiting time that the valve follows after the test signal (default: '10' seconds)
<p>Even though 'Good' is shown, if RESP is set too long, the judgment point will not be good for the next comparison. Also, if 'Bad' is shown, RESP is set too low. Adjust RESP.</p>	
	to show that there is no problem if the valve reaches Dead zone of the set position.
	to show that it is necessary to check the valve status if the valve fails to reach Dead zone of the set position.

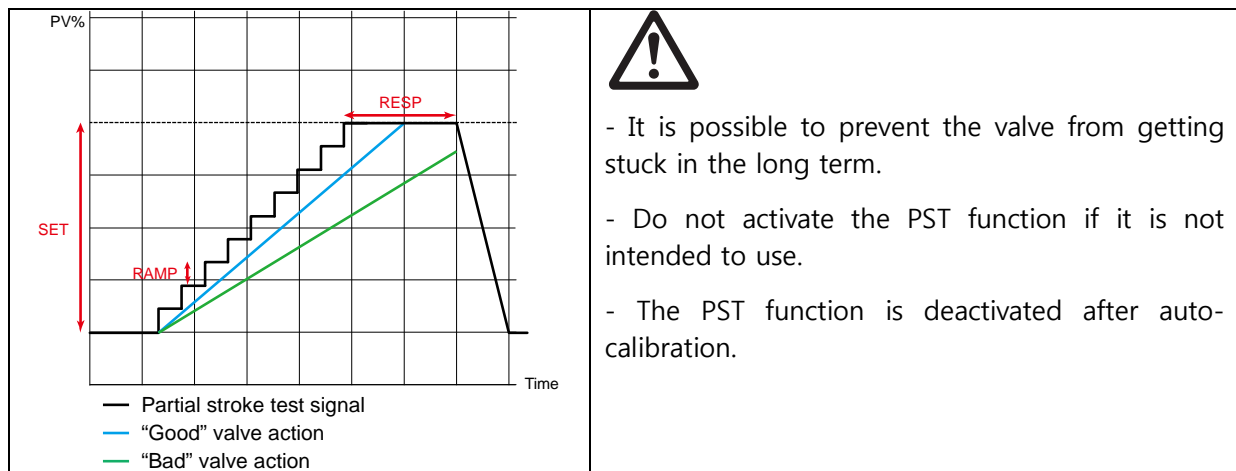

 11.5.11.K [ADDR] – Manual Setting of Profibus PA Address (default: 126)



This is to change the Profibus PA address to 1 – 125 manually on the site. "126" is a factory setting.

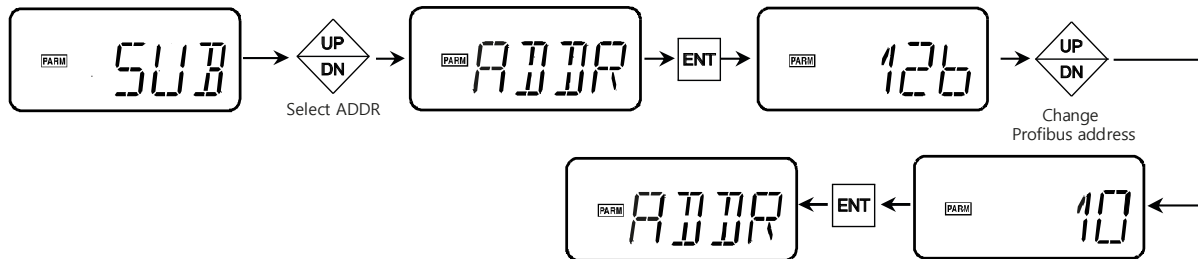

12. Maintenance / Service

12.1 Preliminary Check Points

12.1.1 Voltage

- The positioner commonly requires 4-20mA @ 24VDC for operation.
- Voltage drop (impedance): Without HART – 8.7VDC (435Ω @ 20mA)
With HART – 9.4VDC (470Ω @ 20mA)

12.1.2 Electrical Connections

Check polarities (+, -) of 4-20mA input signal definitely and make the electrical connections.

12.1.3 Pneumatic Connections (see 8.1, 8.2)


12.1.4 Supply Air Quality

A supply air should be definitely clean and compressed free of water, moisture or oil in conformance with IEC 770 and ISA-7.0.01.

12.2 Module Parts

- ① RTQ Coil Assembly (spare part No. 12)
- ② Pilot Valve Assembly (spare part No. 5)
- ③ PCB Control Board Assembly (spare part No. 3)

12.3 Structure of Gauge Block

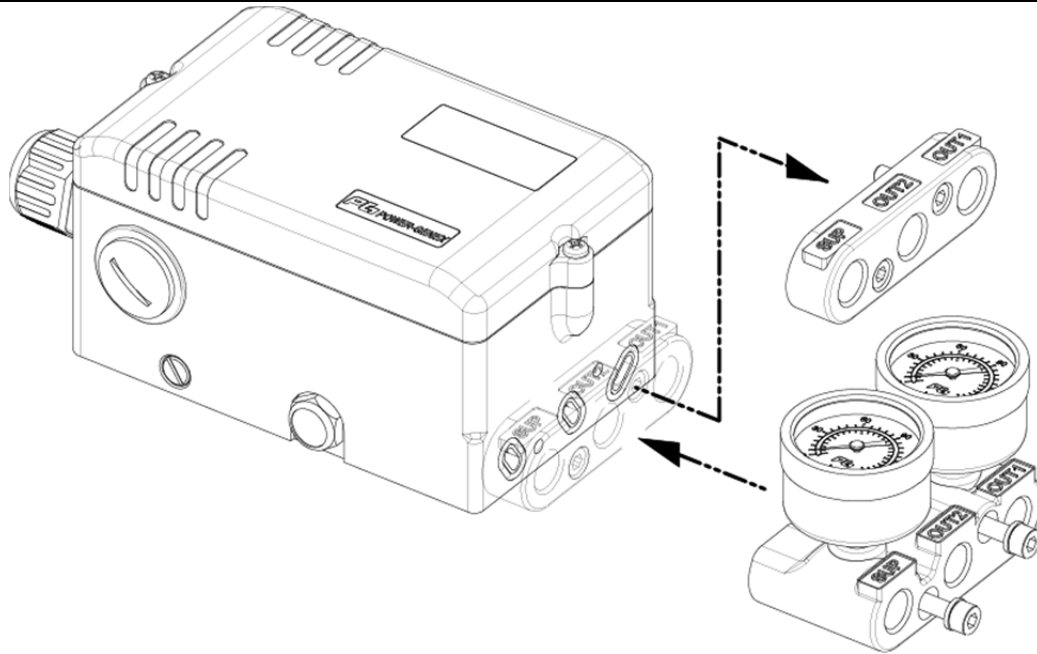

12.4 Re-setting of Potentiometer (spare part No. 14a, 14b)


It is necessary to adjust a setting of potentiometer as below when a gear position is moved due to user's carelessness. For reference, 0~10k Ω potentiometer is installed into the SS2 positioner.

- ① Dis-install the electronic card from the SS2 positioner and make the markings on two gears match with each other.
- ② Move the feedback lever to 50% position and adjust a potentiometer so that it can reach nearly 5k Ω .
- ③ Re-install the SS2 positioner onto the valve and re-perform auto-calibration.

13. Troubleshooting


13.1 Error Codes and Recommended Actions

If the positioner doesn't work properly and **DATA** on LCD blinks, try to take action as below.

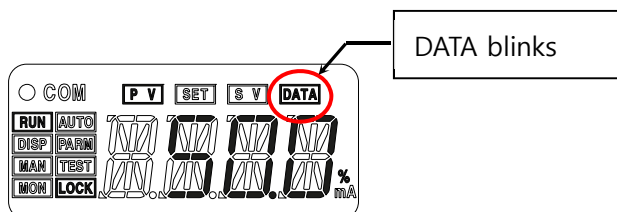

Error Code	Cause	Symton	Action
CMLO	Low input current (3.7mA)	Data on LCD are shown too dim or too bright.	Re-check 4 – 20mA input signals.
CMHI	High input current (20.5mA)		
IGMI	Down Speed Long	Slow operation	The actuator is too big. Use the air volume booster.
IGMX	Up Speed Long		
H/RX	HART Rx Error	HART signal failure	Re-set and re-connect will be done after 2.5 seconds, but it is necessary to check the communication system in case of a continuous error.
MONT	Operating angle out of range	MONT is shown during step 4 and an auto-calibration process is finished without completion.	Re-install the SS2L / SS2R positioner.
LOTT	Bias Low	The valve is not closed or moves slowly.	Loosen a valve packing.
HITT	Bias High	The valve is not open or moves slowly.	
FBFT	Feedback error (0 - 1%)	PM00 is shown at step 4 and an auto-calibration is finished without completion.	Defectiveness of potentiometer socket contact or PCB board
FBSM	Feedback error (2 - 9%)	The operating stroke is too small and the valve doesn't work smoothly.	Re-install the potentiometer and increase the operating angle of the feedback lever.
BAD	PST error	BAD is shown.	Check the valve or increase the response time of PST.
PONT	Potentiometer Error	Problem of potentiometer	Check the potentiometer (Potentiometer Ass'y, Board)
RTQ	Coil Error	Problem of coil	Check the coil assembly.

13.2 Checking Diagram for Stable Valve Control

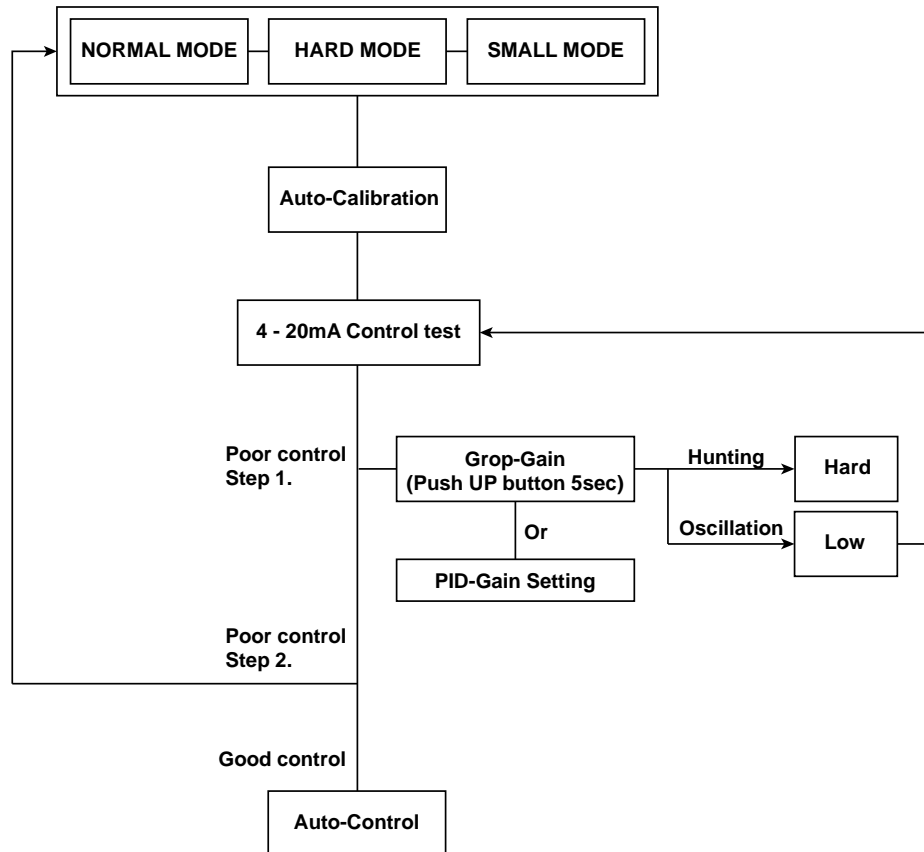

13.2.1 Judgment of Valve Specifications

- Set in Control Mode considering a strength degree of packing and a size of actuator. (C/MD–11.5.20)


13.2.2 Judgment of Control Status

- Check operation with 4-20mA input signals after auto-calibration.
- In case of poor control (hunting / oscillation),
 - 1) Adjust the valve by using Grop-Gain or PID-Gain as shown at Stpe 1. (PID–11.5.9)
(Keep pushing the UP button for 3 seconds to advance into "GROP")
 - 2) If the valve doesn't work properly, try to set in Control Mode and change to other valve working condition again.
(Note that it is necessary to perform auto-calibration again in case of change of Normal → Hard or Small → Hard)


Status	Action	
An actuator is small and responds fast. And a hunting problem happens.	SWST – ON SPED – Adjust	11.5.12 11.5.11
A valve doesn't move smoothly even in HARD mode due to a very strong packing.	FDGN – Re-adjust	11.5.19
A valve moves too slowly in HARD mode.	HBIS – Re-adjust	11.5.18
MONT is shown and auto-calibration fails to carry out.	Re-mount	7.1.7

14. Spare Parts

14.1 SS2L Spare Parts

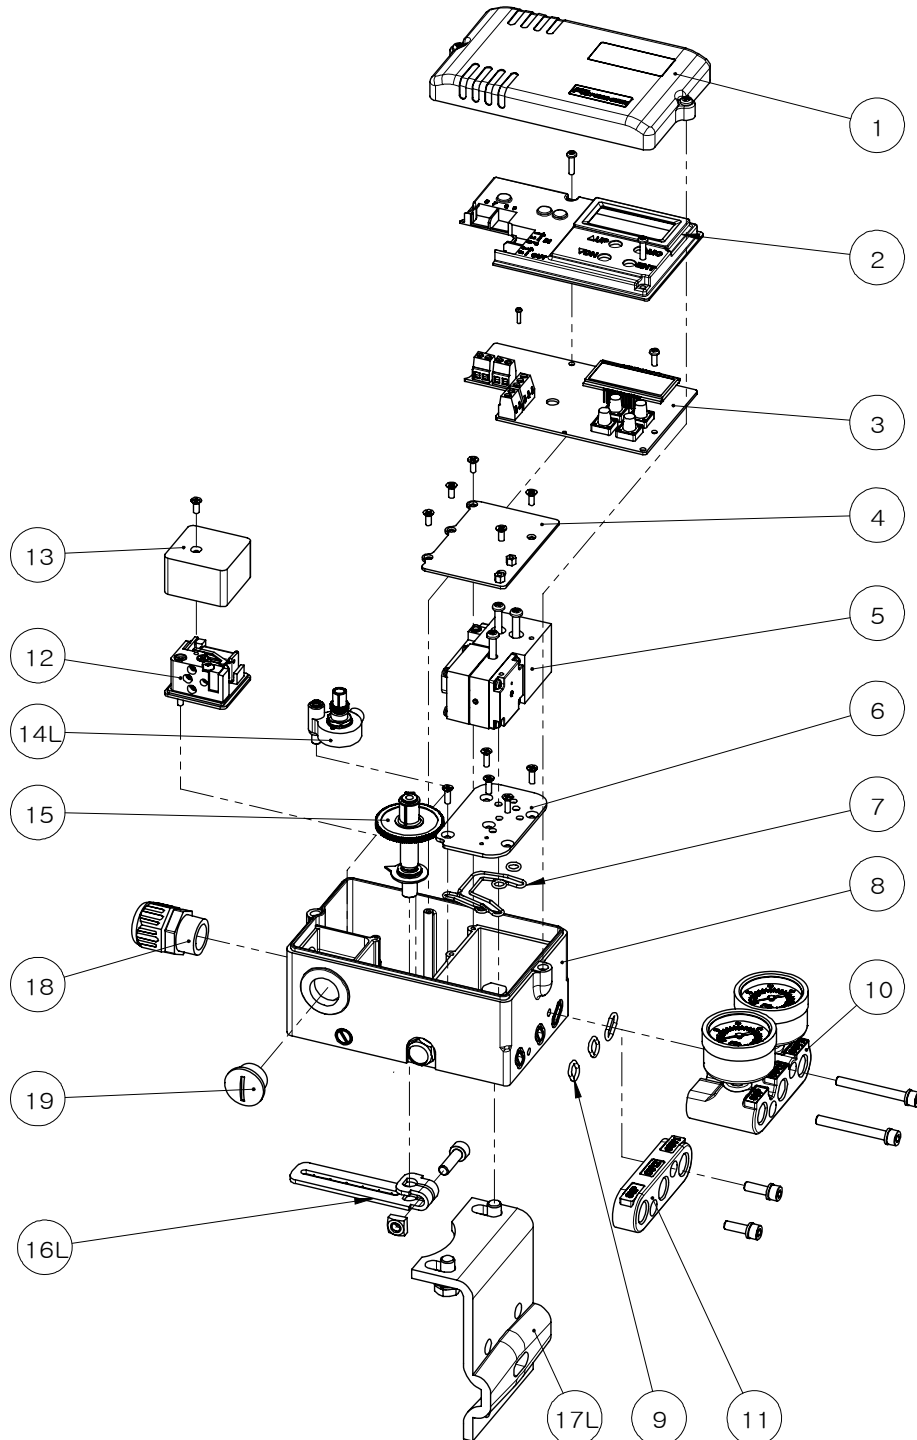

14.2 SS2R Spare Parts

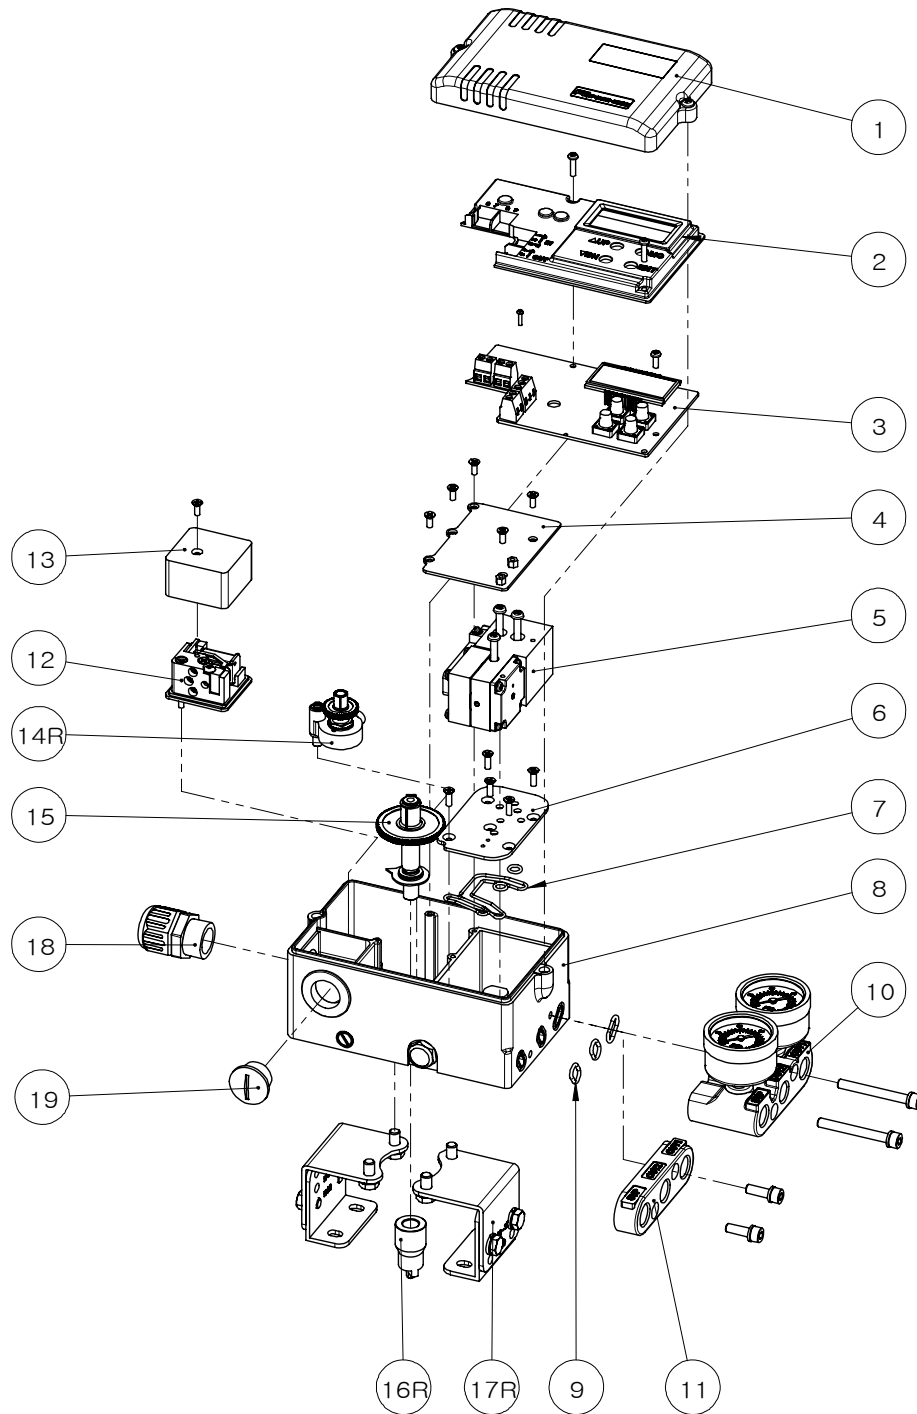


14.3 List of Spare Parts


No.	Part No.	Description
1	S2CO-01	SS2 cover
2	S2BO-03	PCB control board cover
3	BOARD-37	PCB control board module
4	S2BO-08	Pilot valve cover
5	PILOT VALVE-6	Pilot valve module
6	S2BO-06	Body air line cover
7	S2BO-07	Air line O-ring
8	S2BO-01	SS2 body
9	RUB-52	Gauge block O-ring P10
10	S2BO-02	SS2 gauge block (G)
11	S2BO-02N	SS2 block (N)
12	TQ-SS2&3	RTQ coil module
13	S2TQ-02	RTQ coil cover
14	S2BO-09	SS2 potentiometer bracket
15	GEAR-11, SH-36	SS2 main shaft & gear
16L	LEVER-05 ~ 08	SS2 feedback lever
16R	SH-38	SS2&3 rotary feedback joint
17L	BR-12	SS2&3 linear bracket
17R	BR-13,14	SS2&3 rotary bracket
18	77	Cable gland PG16
19	79	Screw plug

15. Dimensions








15.1 SS2L (linear type)

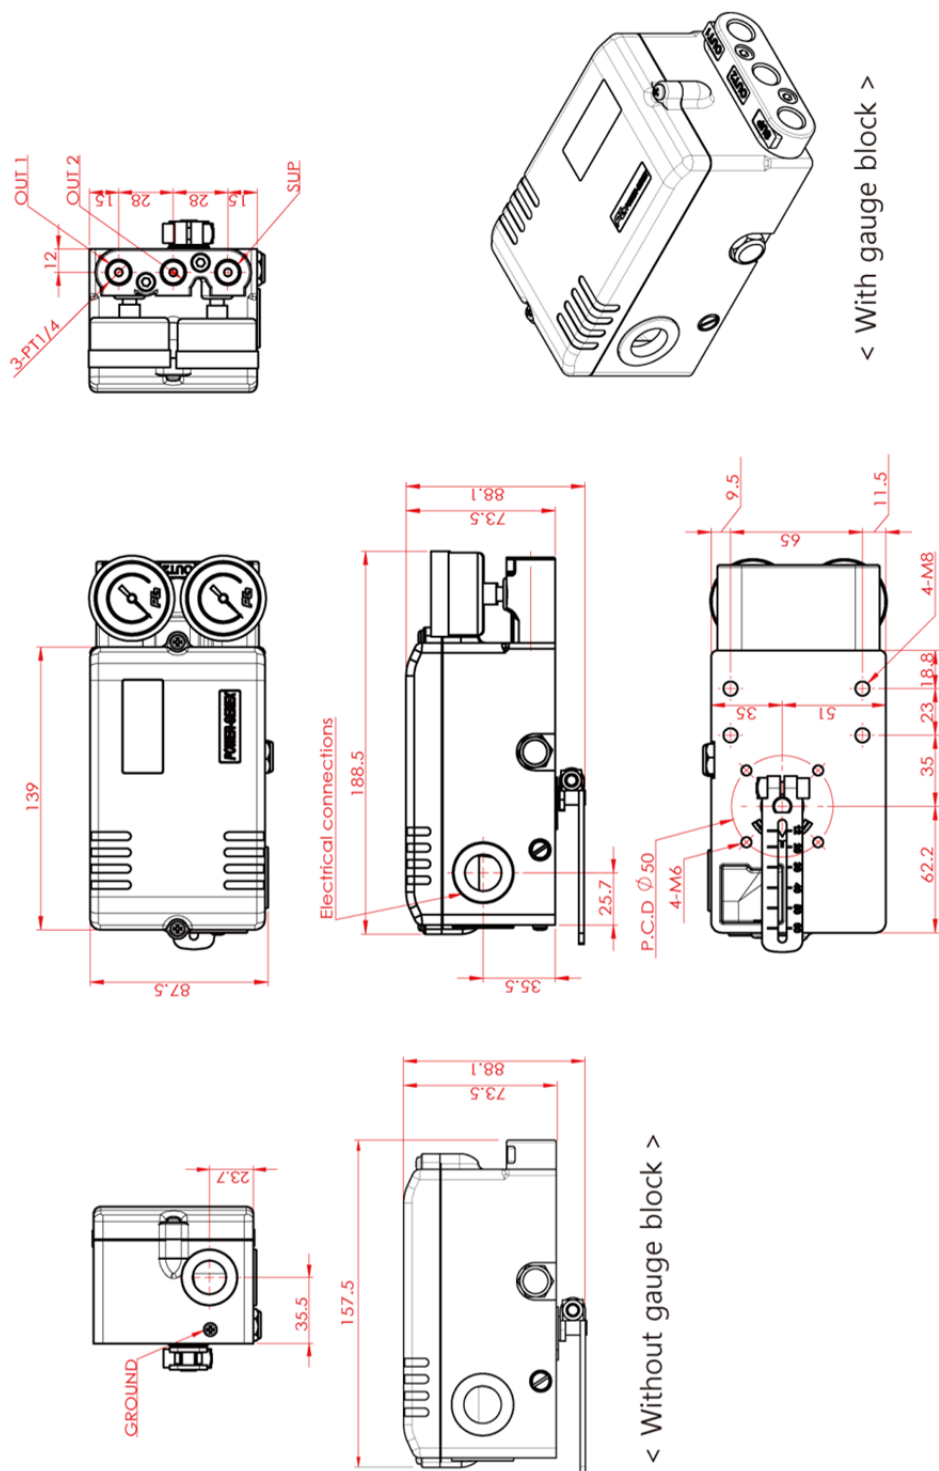

15.2 SS2R (rotary type)

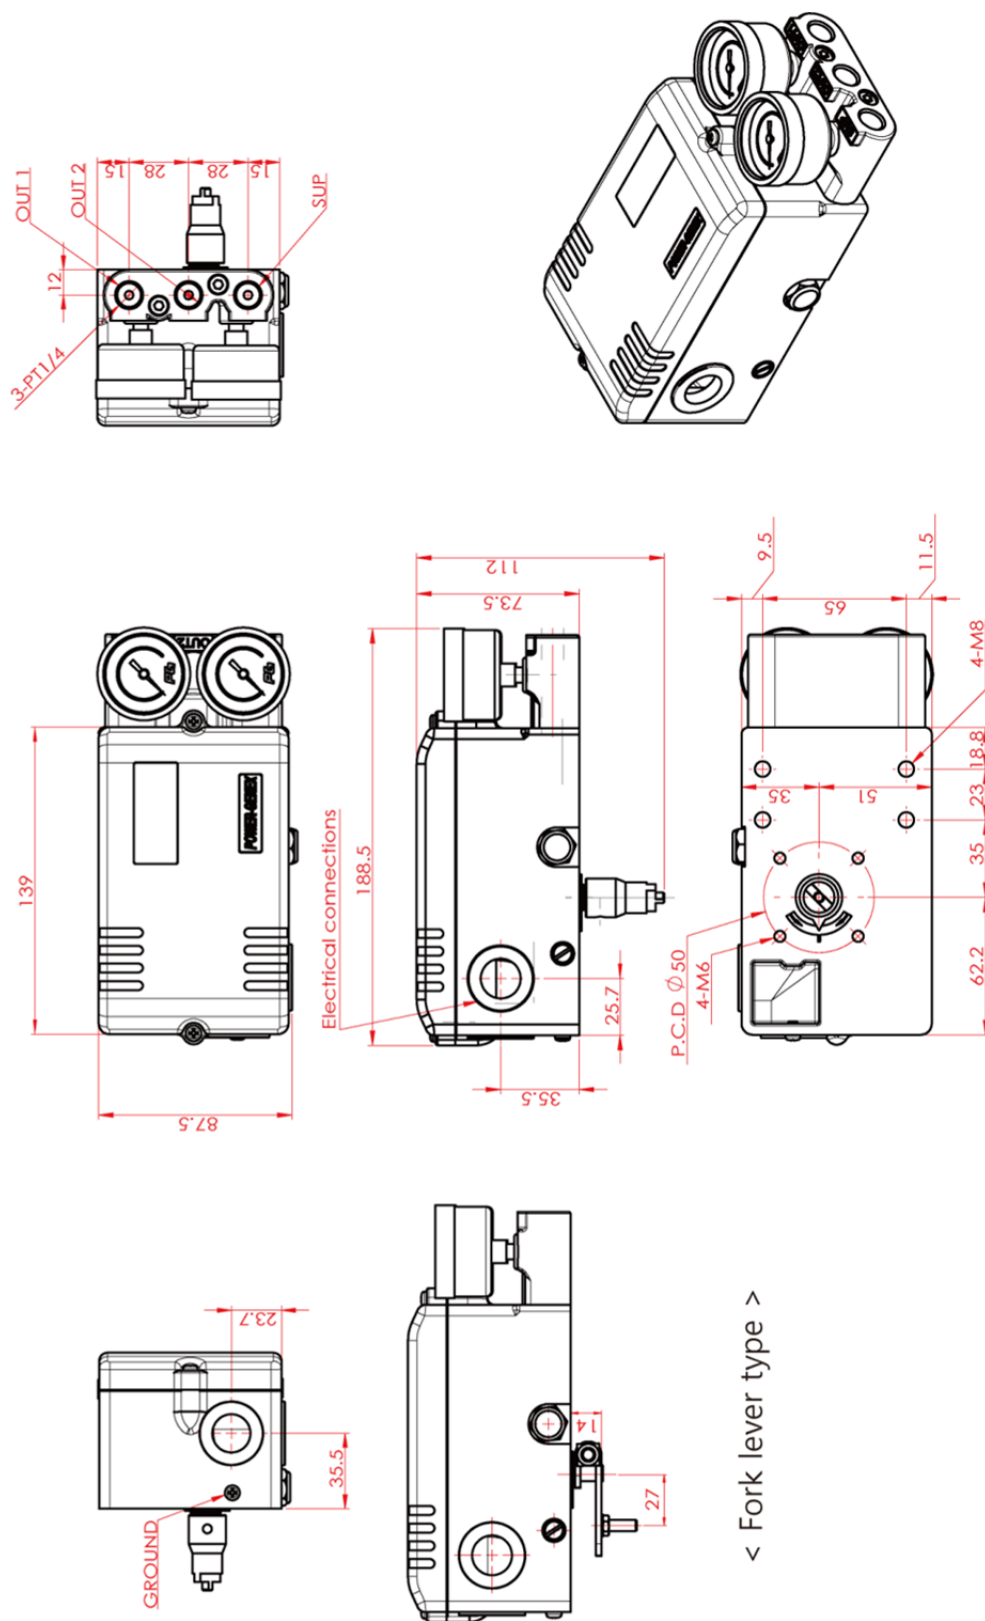

15.3 SS2R (with 2 x SPDT micro switch)

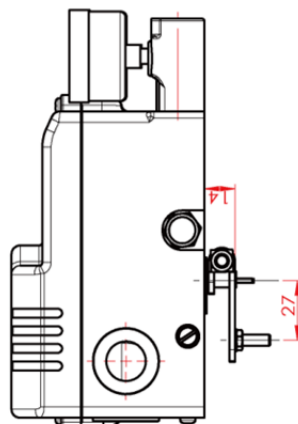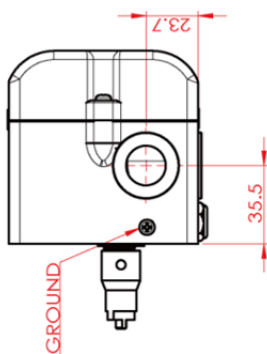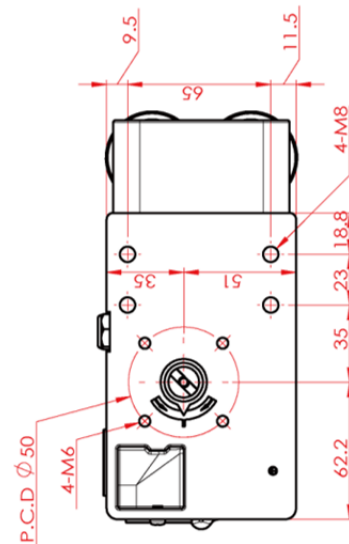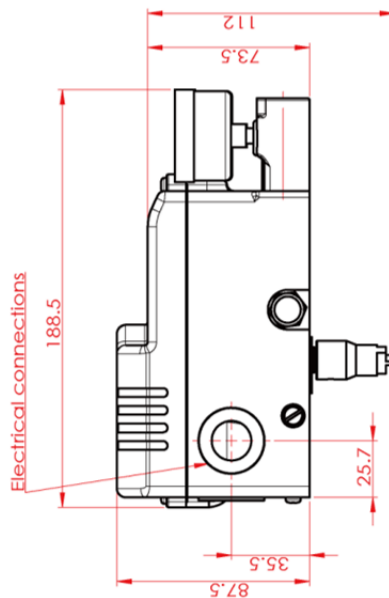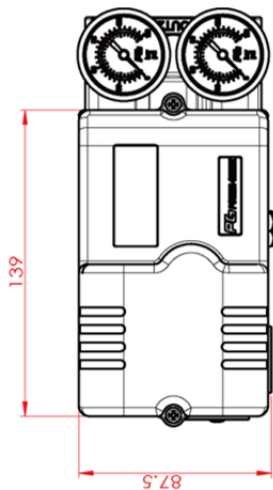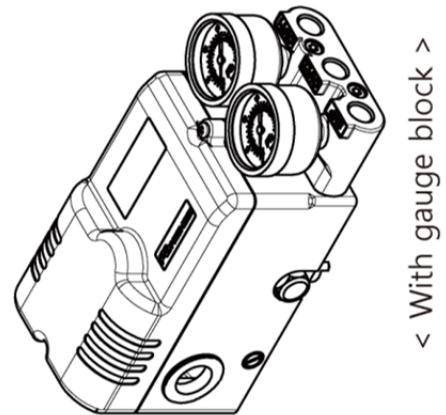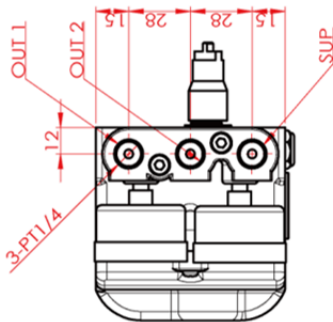

< Fork lever type >

Warranty

1. The warranty period of the product is 1.5 years after the product is shipped from Power-Genex in Korea.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. If a problem happens with the following reasons, please note that the reasonable repairing costs will be charged even during a warranty period.
 - In case that customers retro-fit the products improperly without any instructions from Power-Genex
 - In case that the products are damaged by a bad delivery, storage or handling beyond design conditions
 - In case that the products are used beyond specifications
 - In case that the products are damaged by an improper installation
 - In case that the products are damaged by fire, earthquake, storm, flood, thunder, lighting, other natural disasters, riot, war, exposure to radioactivity
4. If maintenance is required, please contact distributors or Power-Genex directly. A proper and satisfactory customer service will be provided.

**Power-Genex Ltd.**

99, Eunbong-ro, Namdong-gu, Incheon 405-849 Korea

Tel : +82-32-812-6644

Fax : +82-32-812-6645

Website : <http://www.powergenex.com>E-mail : sales@powergenex.com

Subject to change without prior notice